

PVG 32 Proportional Valve

Modules and Code Numbers

PVM, Mechanical Actuation

Symbol	Description		Code number with stop screws w/o stop screws	
157-10.10	PVM, Standard, spring centered Individual oil flow adjustment to ports A and B	22.5° 37.5°	157B3171 157B3172	157B3191 157B3192
	Without actuation lever and base. Shaft for mounting of actuation lever		157B3173	157B3193
	PVM, as standard, witout actuation lever. With base for mounting of actuation lever	22.5° 37.5°	157B3175 157B3174	157B3195 157B3194
	PVM, Standard, spring. Individual oil flow adjustment to ports A and B. (Anodized)	22.5°	157B3184	-