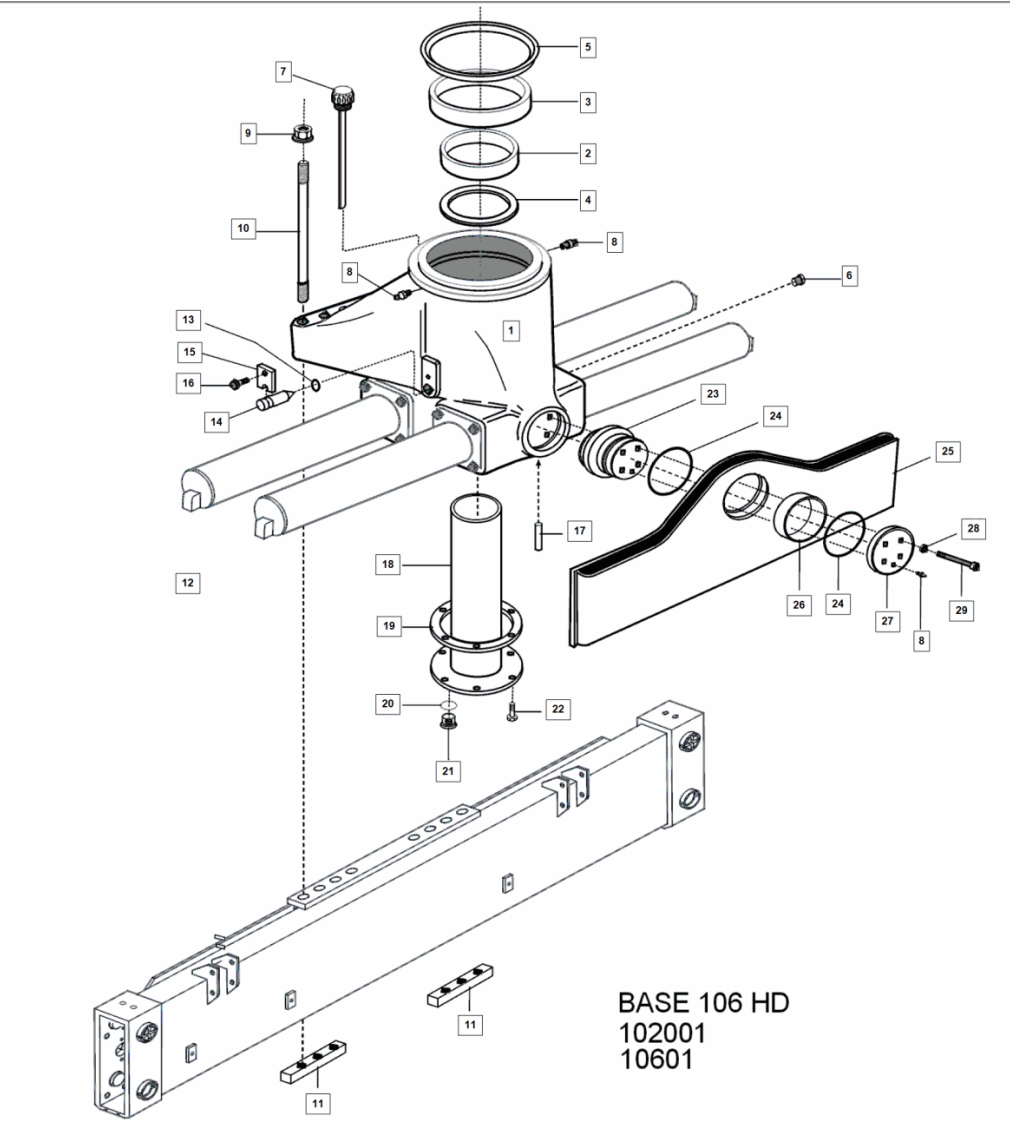


Model:106 HD

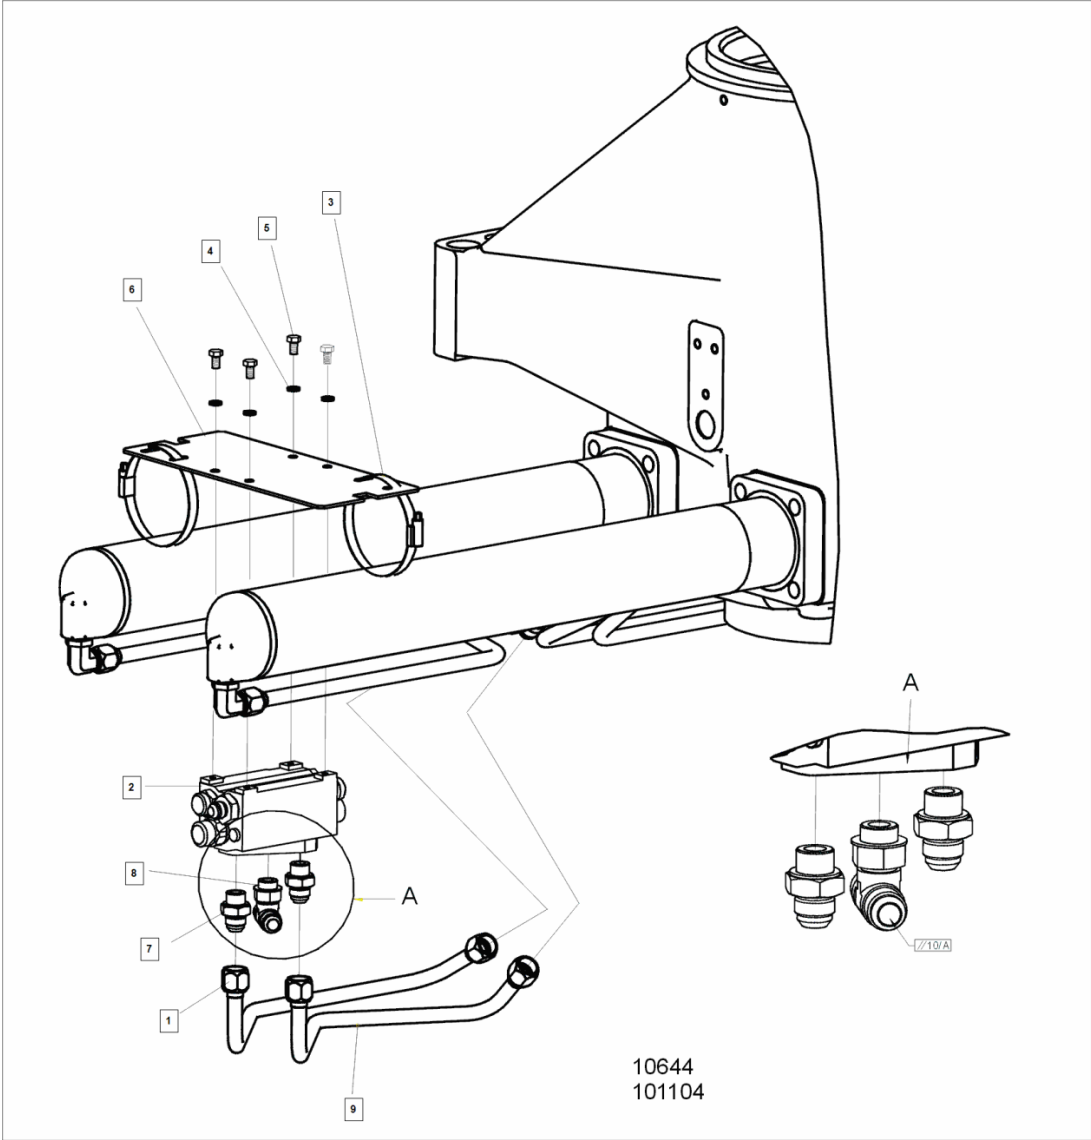
Chapter 2 Crane base

10601

Base

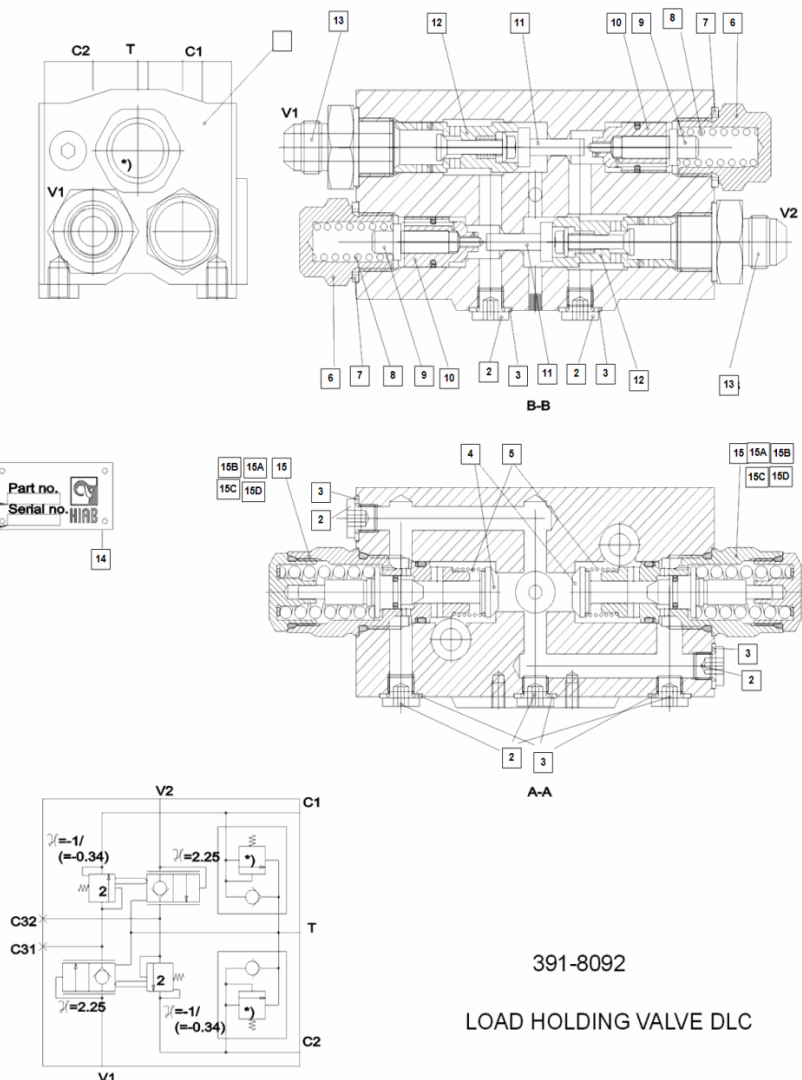
10601 - Base		Pos	Part No	Description	Quantity
 BASE 106 HD 102001 10601		1	3611451	SLEWING HOUSING	1
		4	3546845	BEARING	1
		5	9982931	SEAL RING	1
		6	3900665	PLUG	1
		7	3611469	LEVEL SCALE	1
		8	9906185	GREASE NIPPLE	3
		9	9969010	NUT	6
		10	3904831	STUD BOLT	6
		11	3702758	FIXING PLATE	2
		12	3507840	PIN	1
		13	9921338	O-RING	2
		14	3419827	STOP	2
		15	3493555	SECURING PLATE	2
		16	9924205	SCREW	2
		17	9945288	PIN	4
		18	3604314	SLEEVE	1
		19	3546853	PACKING	1
		20	9933336	O-RING	1
		21	3106268	PLUG	1
		22	9900420	SCREW	6
		23	3705226	PIN	1
		24	9851810	O-RING	2
		25	3704904	THREE POINT BRIDGE	1
		27	3705234	COVER	1
		28	3097889	WASHER	4
		29	9923136	SCREW	4
		Kit 3611451 SLEWING HOUSING:			
		2	3546837	BUSHING	1
		3	3546829	BUSHING	1
		Kit 3704904 THREE POINT BRIDGE:			
		26	9851704	BUSHING	1

Model:106 HD
Chapter 2 Base**10644**
Connection kit LHV

10644 - Connection kit LHV		Pos	Part No	Description	Quantity
		1	101136	HYDRAULIC PIPE	1
		2	391-8092	LOAD HOLDING VALVE	1
		3	992-5244	HOSE CLAMP	2
		4	980-4650	LOCKING WASHER	4
		5	990-0403	SCREW	4
		6	101189	BRACKET	1
		7	999-1662	COUPLING	2
		8	982-1619	T-COUPLING	1
		9	101137	HYDRAULIC PIPE	1

Model:106 HD
Chapter 2 Connection kit LHV

3918092
Load holding valve

3918092 - Load holding valve		Pos	Part No	Description	Quantity
 Coined with part number (XXXX XXXX) Part no. HIAB Coined with serial number (XXXX) Serial no. HIAB 391-8092 LOAD HOLDING VALVE DLC		2	9993746	PLUG	7
		3	9939415	SEAL WASHER	7
		4	9829695	CONE	2
		5	9830995	SPRING WASHER	2
		6	9831151	COVER	2
		7	9904042	SEAL WASHER	2
		8	9830537	SPRING WASHER	2
		9	9835041	GUIDE	2
		10	9835024	CHECK VALVE	2
		11	9835032	JACK	2
		12	9835059	PISTON	2
		13	9998438	COUPLING	2
		14	9829890	SIGN	1
		15	9833935	RELIEF VALVE	1
		Kit 9833935 RELIEF VALVE:			
		15A	9933336	O-RING	1
		15B	9938745	SUPPORT RING	1
		15C	9950940	O-RING	1
		15D	9833951	O-RING	1