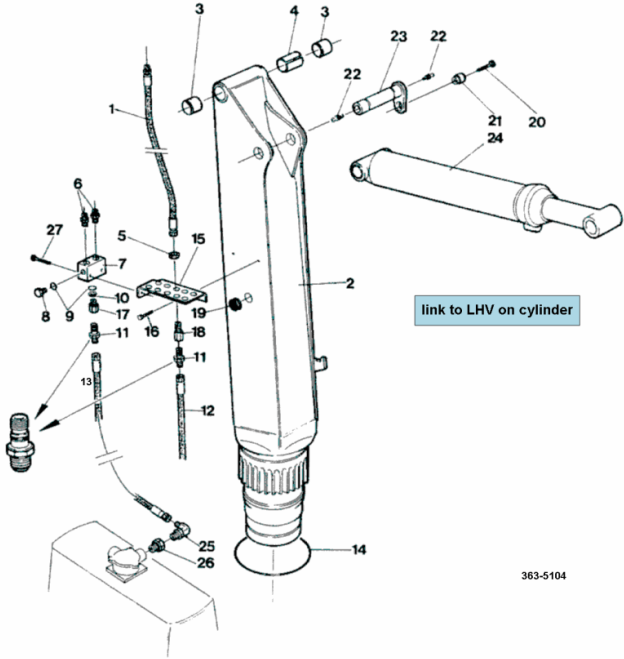


Model:071 with JIC As fr.Ser.No 0710001
Chapter 2 Base & Column

3635104
Column

3635104 - Column		Pos	Part No	Description	Quantity
 link to LHV on cylinder 363-5104		1	9825746	HP HOSE	2
		2	3513572	COLUMN 071-090	1
		3	9937528	BUSHING	2
		4	3444503	SPACING SLEEVE	1
		5	3600149	NUT	6
		6	9991662	NIPPLE 7/8-1/2	2
		7	3564134	T-BLOCK	1
		8	9994424	PLUG	1
		9	9956417	O-RING	1
		10	9809287	SUPPORT RING	1
		11	3595528	SWIVEL NIPPLE	7
		12	9825720	HP HOSE	6
		13	9819657	HP HOSE	1
		14	9921885	O-RING	1
		15	3592685	SHELF	1
		16	9963537	SCREW	2
		17	3592693	SWIVEL HOUSING	1
		18	3595510	SWIVEL HOUSING	6
		19	3629465	CONDUIT ENTRY	1
		20	9900497	SCREW	1
		21	3653412	SPACER	1
		22	9906185	GREASE NIPPLE	2
		23	3492575	SHAFT	1
		24	3554589	FIRST BOOM CYLINDER	1
		25	9819673	ANGLE COUPLING	1
		27	9963561	SCREW	2
		28	9909931	O-RING	1
		Kit 3539181 REDUCTION NIPPLE:			
		28	9909931	O-RING	1


Column - 3635104

Model:071 with JIC As fr.Ser.No 0710001 Chapter 2 Column

3513572
Column

3513572 - Column

Pos	Part No	Description	Quantity
1	9937528	BUSHING	2

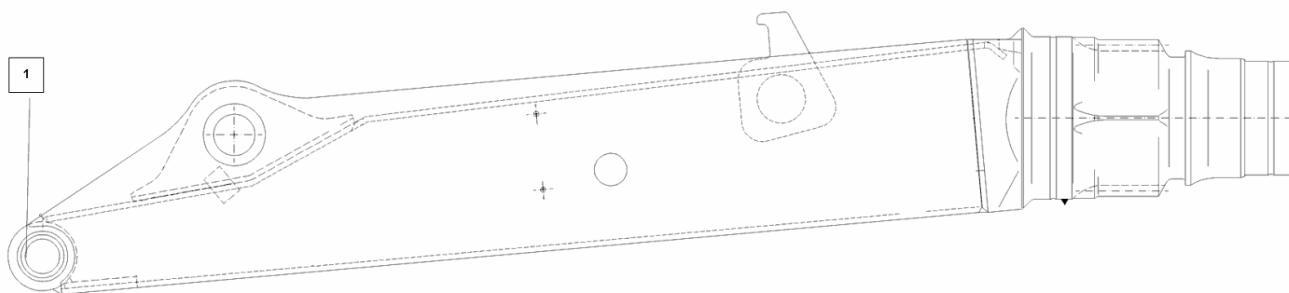


351-3572

Column - 3513572

Model:071 with JIC As fr.Ser.No 0710001
 Chapter 2 Column


3595528
Swivel nipple

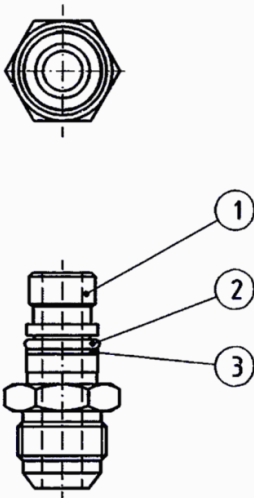3595528 - Swivel nipple		Pos	Part No	Description	Quantity
		1	3595501	SWIVEL NIPPLE	1
		2	9933310	O-RING	1
		3	9938702	SUPPORT RING	1

Swivel nipple - 3595528

Model:071 with JIC As fr.Ser.No 0710001
Chapter 2 Column

3554589
First boom cylinder

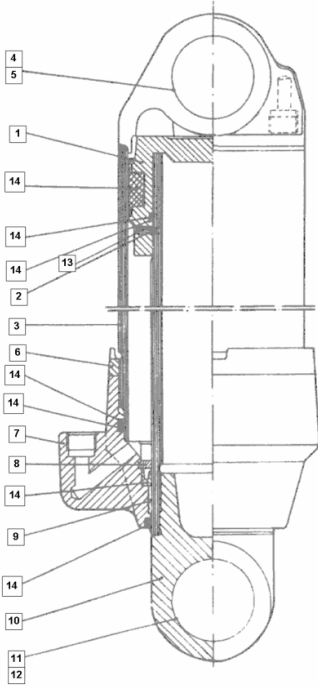3554589 - First boom cylinder		Pos	Part No	Description	Quantity
		1	3554732	PISTON	1
		2	3555003	LOCKING WIRE	1
		3	3486893	CYLINDER TUBE	1
		4	3482065	SPACER	1
		5	9991956	BUSHING	2
		6	3539504	LOCKING NUT	1
		7	3539521	CYLINDER HEAD	1
		8	3493296	RETAINING RING	1
		9	9804111	BUSHING	1
		10	3554724	PISTON ROD	1
		11	9810692	BUSHING	2
		12	3525554	SPACER	1
		13	3564428	STOP LUG	1
		14	3300871	SEAL KIT	1

First boom cylinder - 3554589