



Bulletin HY17-8812-M1/UK

Spare Parts List Series P70, Gen. 2

Effective date: August 24, 2016

Supersedes: April 14, 2015



This list of spare parts is designed to give you a good idea of the components included in the product range for valves. To see precisely which component is used for a specific product, you will need to look at the customer specification for the product in question. The customer specification contains a number of entries, and for each entry, a code pressure or flow is specified with a code or a number. To help you find your way around, this list of spare parts contains references to these entries and codes.

Codes on the image page of the list of spare parts usually appear in bold and enclosed in a border. The table page contains available spare part sets. The ordering code is the product code that appears in the Part column.

The spare part to be used is determined by the first two columns, which contain the entry and the code from the customer specification. If these columns are empty, the spare part set is valid regardless of the selected code, unless indicated otherwise

The symbols in the frame below are used in this Spare Parts List to help you find the right tools, the right torques, suitable grease etc.

Technical index description

- 1 = Item pos. no. 1.
1(2x) = Item pos. no. 1, contains 2 pieces in the kit
1[2] = Item pos. no. 2 already mounted on item pos. no. 1 at delivery.
1[2](2x) = Item pos. no. 1 (see above) contains 2 pieces in the kit.

Conversion factors

1 kg	= 2.2046 lb
1 N	= 0.22481 lbf
1 Nm	= 0.10197 kpm
1 bar	= 14.504 psi
1 l	= 0.21997 UK gallon
1 l	= 0.26417 US gallon
1 cm ³	= 0.061024 in ³
1 m	= 3.2808 feet
1 mm	= 0.03937 in
1°C	= (9/5x°C+32)°F

Symbols for servicing

 = Phillips screw	 = Thread for disassembly type...
 = Slot screw	 = Tightening torque in Nm
 = Socket head dimensions in mm and/or inch	 = Use locking/sealing fluid type...
 = Hexagon dimensions in mm and/or inch	 = Use corrosion preventative type...
 = Sixpoint socket	 = Use hydraulic liquid for lubrication
 = Wrench size in mm and/or inch or special assembly/disassembly tool needed. No...	 = Use grease type...
 = Factory preadjusted item, see appendix A	 = Spool classifies by size, see appendix A



WARNING – USER RESPONSIBILITY

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker-Hannifin Corporation, its subsidiaries and authorized distributors provide product or system options for further investigation by users having technical expertise.

The user, through its own analysis and testing, is solely responsible for making the final selection of the system and components and assuring that all performance, endurance, maintenance, safety and warning requirements of the application are met. The user must analyze all aspects of the application, follow applicable industry standards, and follow the information concerning the product in the current product catalog and in any other materials provided from Parker or its subsidiaries or authorized distributors.


To the extent that Parker or its subsidiaries or authorized distributors provide component or system options based upon data or specifications provided by the user, the user is responsible for determining that such data and specifications are suitable and sufficient for all applications and reasonably foreseeable uses of the components or systems.

Offer of Sale

Please contact your Parker representation for a detailed "Offer of Sale".

List of contents


Conventional Inlet Options	
PB, PS, P1B, P2B, T2B, L, CUI	4
Pump Unloading Inlet Options	
IU, IS, PB, PS, BX, BEN, T2B, 12, 24	6
Pump Unloading Inlet Options	
Inlet PRI Options	
PS, PB	8
Inlet CFC Options	
CFC	10
Mid Inlet Options	
PB, PS, Y, C3, C5, C6	12
Spool Actuators, Side A	
CB, LMA, LMB, LU, A034	14
Spool Actuators, Side A	
MJA, MJB	16
Spool Actuators, Side B	
C, C140, B2C, CB, SI, TPOL	18
Spool Actuators, Side B	
A028, A020	20
Spool Actuators, Side B	
ACE, 12, 24	22
Spool Actuators, Side B	
ACP	24
Spool Actuators, Sides A and B	
PC, FPC	26
Spool Actuators, Sides A and B	
ECS, ECH, FECS, SI, CI, A027, H, N, A, D, 12, 24	28
Basic Functions	
N, PA, N2, X2, Y2, EA, EB	30
Conventional Outlet Options , Tie rods	
T1B, T3B, S, ST, LD, Tie rods	32
Outlet for pilot pressure Options	
S, YS, R35, /, TP, TPB, TPC, LD, T1B, T3B, PT, PT8	34
Appendix A: Warnings	36
Appendix B: S-plug in Tank Gallery, LD (old design)	37
Appendix C: Assembly Instructions. Tools	39

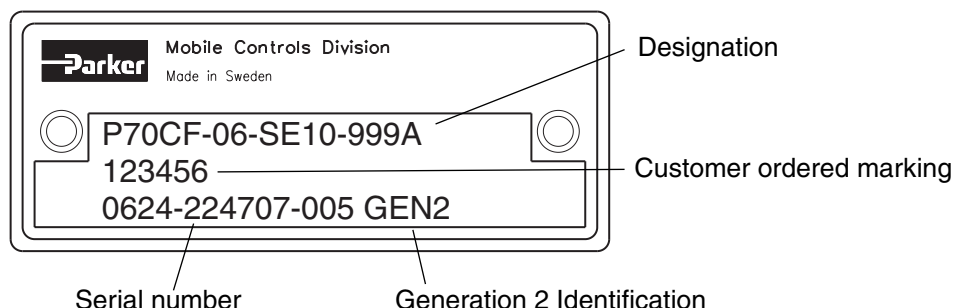


Valve serial numbers consist of three groups of digits
 The first group shows year and week of manufacture:
 In this example, 0624 means week 24 of 2006
 The remaining digits are for internal use within Parker

The diagram illustrates the assembly of the Dinitrol 40 engine. Key components and their assembly order are as follows:

- Base Assembly:** The main engine block is shown with various ports and mounting points.
- Intake System:**
 - P1B:** A 14mm (10 or 3/8") x 60mm plug is inserted into the intake port.
 - PS/PB:** A 3mm x 30mm plug is inserted into the intake port.
 - PS/PB:** A 6mm (6 or 1/4") x 30mm plug is inserted into the intake port.
 - PS/PB:** A 13mm x 10mm x 60mm plug is inserted into the intake port.
- Exhaust System:**
 - T2B:** A 14mm (10 or 3/8") x 60mm plug is inserted into the exhaust port.
 - CUI:** A 22mm x 60mm plug is inserted into the exhaust port.
 - P2B:** A 14mm (10 or 3/8") x 60mm plug is inserted into the exhaust port.
- Internal Components:**
 - L:** A 16mm x 60mm plug is inserted into the internal port.
 - PS/PB:** A 3mm x 30mm plug is inserted into the internal port.
 - PS/PB:** A 6mm (6 or 1/4") x 30mm plug is inserted into the internal port.
 - PS/PB:** A 13mm x 10mm x 60mm plug is inserted into the internal port.
- Assembly Notes:**
 - a)** Indicated for the placement of the 22mm x 60mm plug (CUI) and the 16mm x 60mm plug (L).
 - b)** Indicated for the placement of the 6mm (6 or 1/4") x 30mm plug (PS/PB).
 - max1** indicates the maximum length for the 3mm x 30mm plug (PS/PB).
 - Dinitrol 40** is the recommended oil for the engine.

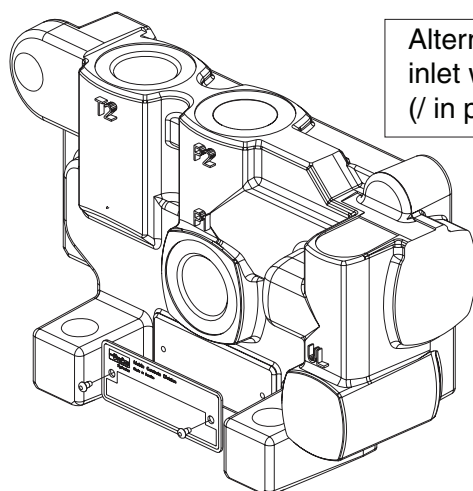


Alternative appearance,
inlet without main relief
(/ in pos 16)

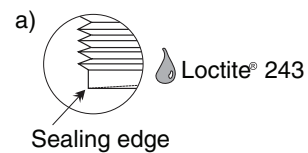


b) Not at "CUI" in pos. 27,
or "/" in pos. 16.

See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
PS, PB	16	398000K042	Main stage	10, 11, 13
PS, PB	16	398000K069	Pilot part, main relief valve PLD03	7 [31, 32, 33]
PS, PB	16	393000K831	Seal kit pilot part, main relief	31, 32, 33
PS, PB	16	-	Plug VST11/2EDCF	13
PB	16	393000K852	Sealing set	8, 9
PS, PB + G	16 + 04	-	Plug VST11/4EDCF	3
PS, PB + U	16 + 04	-	Plug 6HP5ON-S	3
PS, PB + G	16 + 04	6760004	Orifice kit Ø0.9 mm, BSP	19 (5x)
PS, PB + U	16 + 04	6760005	Orifice kit Ø0.9 mm, UNF	19 (5x)
P1B, P2B, T2B + G	25, 26, 27 + 04	-	Plug VST11/2EDCF	14
P1B, P2B, T2B + U	25, 26, 27 + 04	-	Plug 10HP5ON-S	14
L + G	27 + 04	398000K047	Plug (parallel connection), BSP	16
L + U	27 + 04	398000K185	Plug (parallel connection), UNF	16
CUI + G	27 + 04	398000K226	Orifice Ø1.0 mm (unloaded const. press.), BSP	22
CUI + U	27 + 04	398000K227	Orifice Ø1.0 mm (unloaded const. press.), UNF	22

IU, IS, PB, PS, BX, BEN, T2B, 12, 24

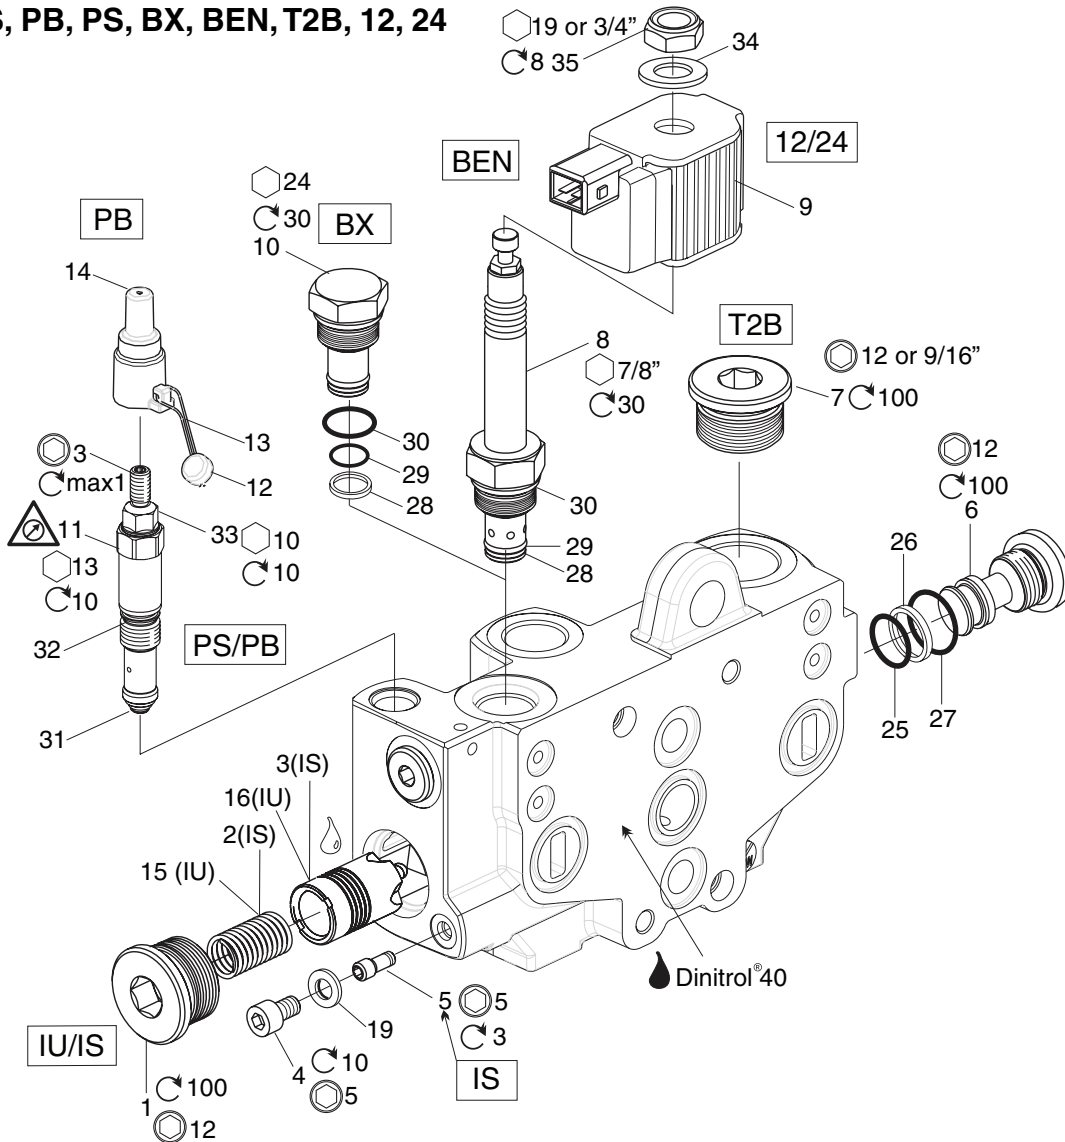


Old style used up to serial No. 0704-...

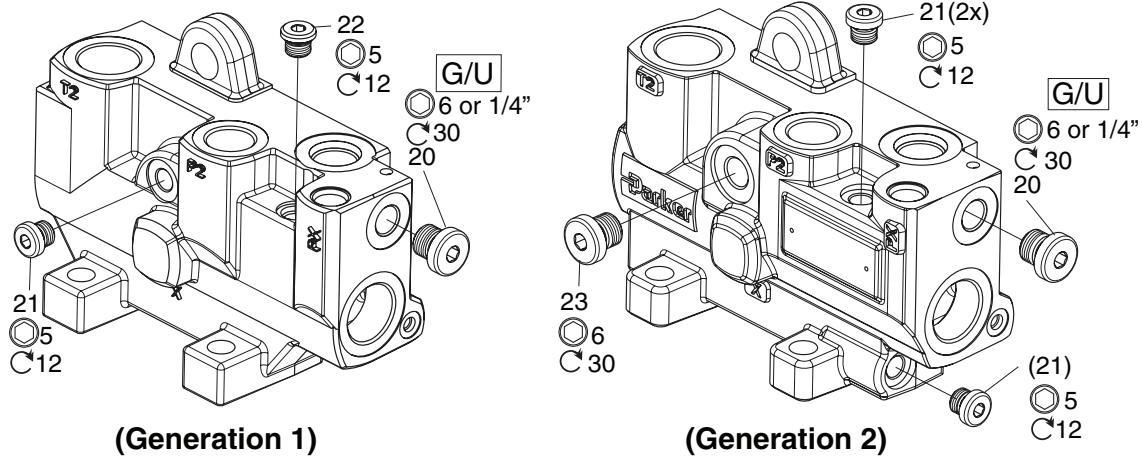


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
PS, PB	16	398000K069	Pilot part, Main relief valve	11 [31, 32, 33]
PS, PB	16	393000K831	Seal kit, Pilot part relief	31, 32, 33
PB	16	398000K850	Sealing set (for PB)	12, 13, 14
T2B + G	25 + 04	-	Plug VSTI3/4EDCF	7
T2B + U	25 + 04	-	Plug 12HP5ON-S	7
BEN	22	398000K045	Pump unloading valve	8 [28, 29, 30, 35], 34
BEN	22	-	SK08-2, seal kit for item 8	28, 29, 30
12	05	393000K448	Coil 12 VDC	9
24	05	6760652	Coil 24 VDC	9
BX	22	398000K044	Pump unloading blocked	10 [28, 29, 30]
BX	22	-	SK08-2, seal kit for BX	28, 29, 30
IS, IU	15	-	Plug VSTI3/4EDCF	1
IS, IU	15	9120091024	Y- plug	6 [25, 26, 27]
IS, IU	15	9120091030	Seal kit for Y- plug	25, 26, 27
IS	15	6760138	Spool IS	2, 3, 4 [19], 5
IU	15	6760006	Spool IU	4 [19], 15, 16
IS, IU	15	6760017	Plug kit M6x12	4(2x), 19(2x)
G	04	-	Plug VSTI1/4EDCF	20
U	04	-	Plug 6HP5ON-S	20
		-	Plug VSTI1/8EDCF	21
		6760040	Plug (O-ring) 1/8", BSP	22
		-	Plug VSTI1/4EDCF	23

PS, PB

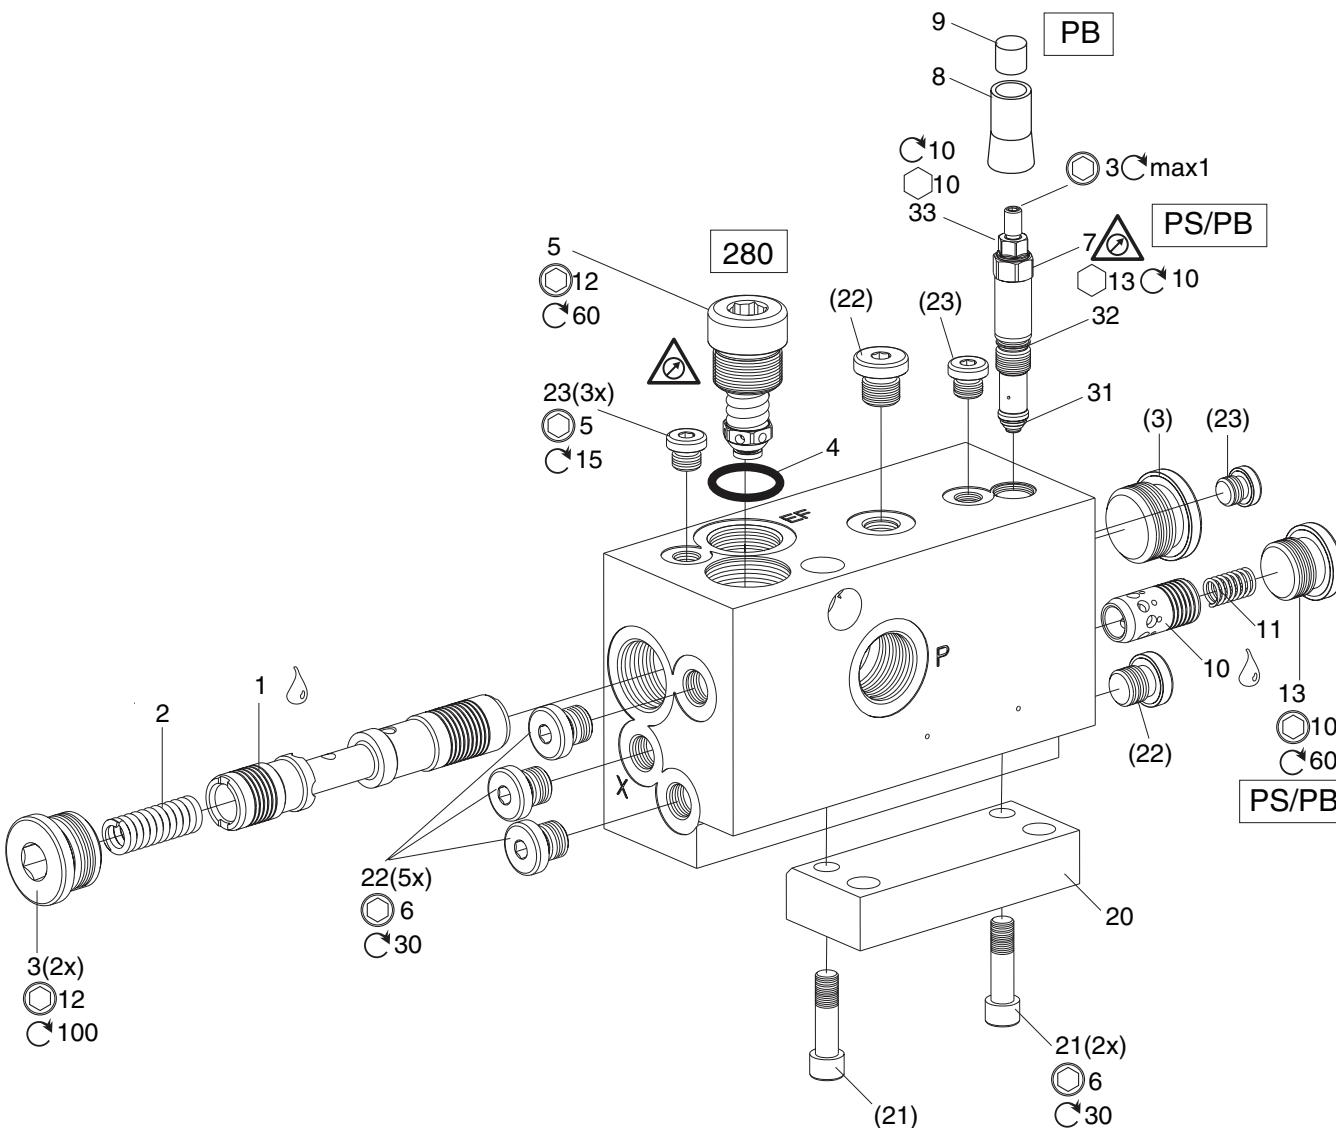

See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
PRI + G	15 + 04	6760580	Pilot spool	1, 2
PRI + G	15 + 04	-	Plug VSTI3/4EDCF	3
PRI + G	15 + 04	-	Plug VSTI1/2EDCF	13
PB	16	393000K852	Sealing kit	8, 9
PS/PB	16	398000K069	Pilot part, main relief valve	7 [31, 32, 33]
PS, PB	16	393000K831	Seal kit PS, PB	31, 32, 33
PS, PB	16	398000K042	Main stage	10, 11, 13
280	29	9120029116	Port relief valve PCL082-280-20	5 [4] 
280	29	6760193	Seal kit PLC082	4 (5x)
PRI	15	6760581	Bracket kit	20, 21(2x)
PRI + G	15 + 04	-	Plug VSTI1/8EDCF	23
PRI + G	15 + 04	-	Plug VSTI1/4EDCF	22


CFC

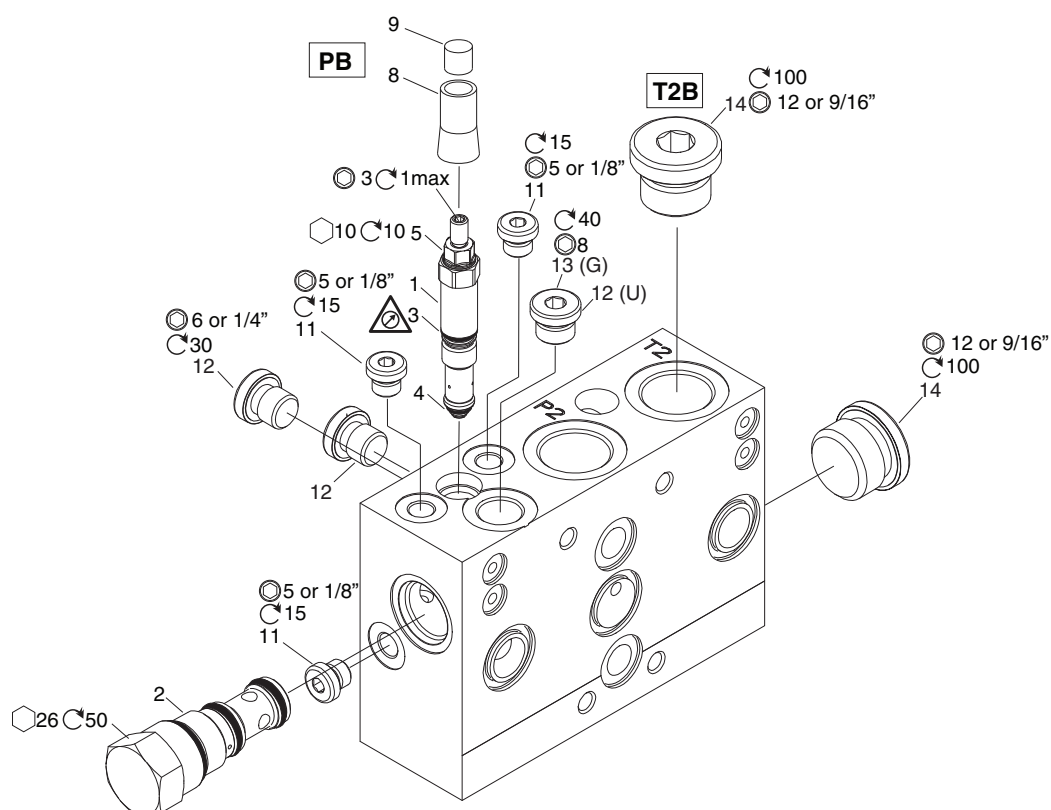

Inlet CFC Options



See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
CFC	15	398000K069	Main relief valve pilot, PLD03	1[3,4,5]
CFC	15	393000K831	Seal kit	3,4,5
PB	16	393000K852	Sealing kit	8,9
CFC	15	-	RO4E3-15 ON	2
CFC	15	-	Screw P6SS 6x6	Not shown (locking fluid STD 1262,15)
CFC	15	-	Restrictor screw M6x6 Ø0,8	Not shown (locking fluid STD 1262,15)
CFC + G	15 + 04	-	Plug VST11/8EDCF	11
CFC + U	15 + 04	-	Plug 3HP5ON-S	11
CFC + G	15 + 04	-	Plug VST11/4EDCF	12
CFC + U	15 + 04	-	Plug 6HP5ON-S	12
CFC + G	15 + 04	-	Plug VST13/8EDCF	13
CFC + G	15 + 04	-	Plug VST13/4EDCF	14
CFC + U	15 + 04	-	Plug 12HP5ON-S	14

PB, PS, Y, C3, C5, C6

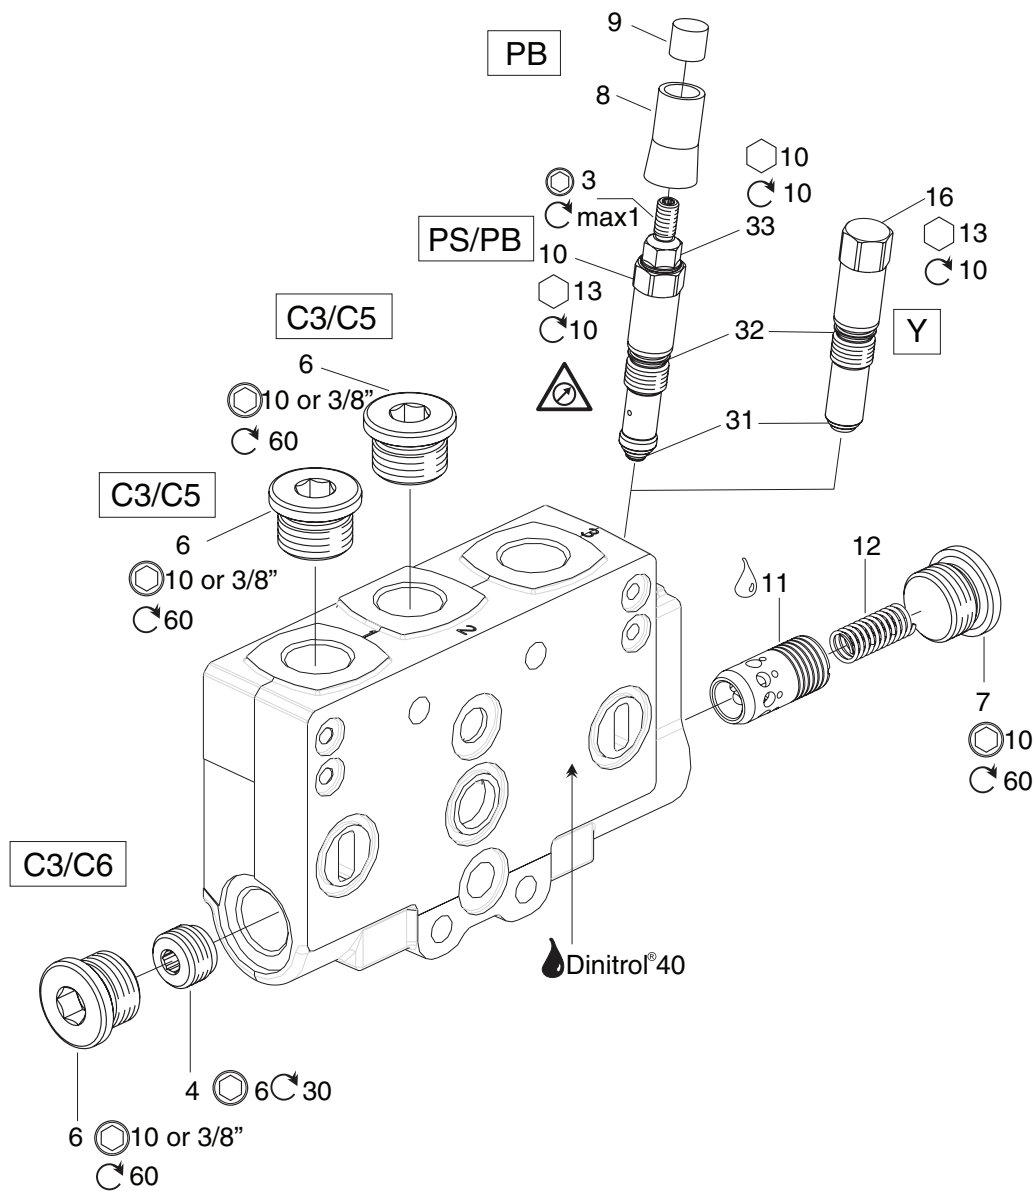


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
MI	90	398000K042	Main stage	7, 11, 12
PS, PB	94	398000K069	Main relief valve pilot part PLD03	10 [31, 32, 33]
PS, PB, Y	94	393000K831	Seal kit PS, PB, Y	31, 32, 33 (With exception of 33 for Y)
MI	90	-	Plug VSTI1/2EDCF	7
PB	94	393000K852	Sealing set (for PB)	8, 9
Y	94	398000K123	Cavity plug Y	16 [31, 32]
C3, C5, C6 + G	93 + 04	-	Plug VSTI1/2EDCF	6
C3, C5, C6 + U	93 + 04	-	Plug 10HP5ON-S	6
C3, C6	93	398000K405	Plug	4
C3, C6	93	6760405	Plug	4 (50x)

CB, LMA, LMB, LU, A034

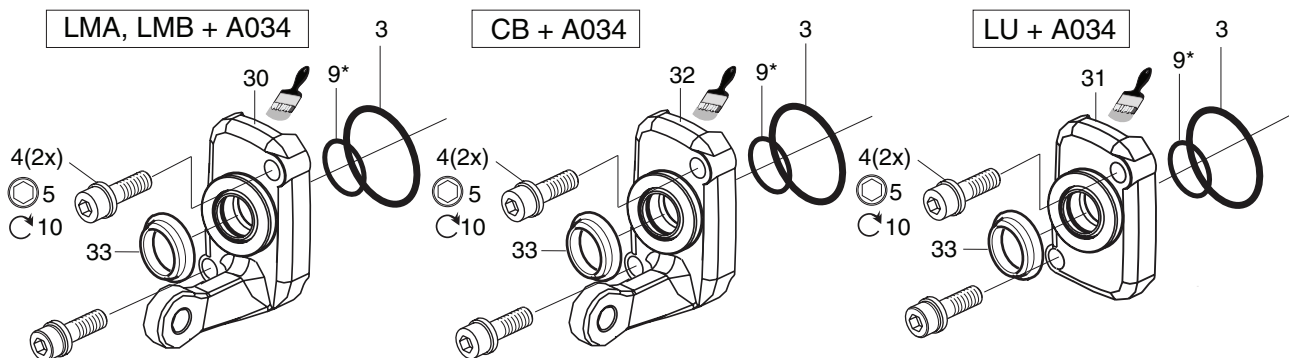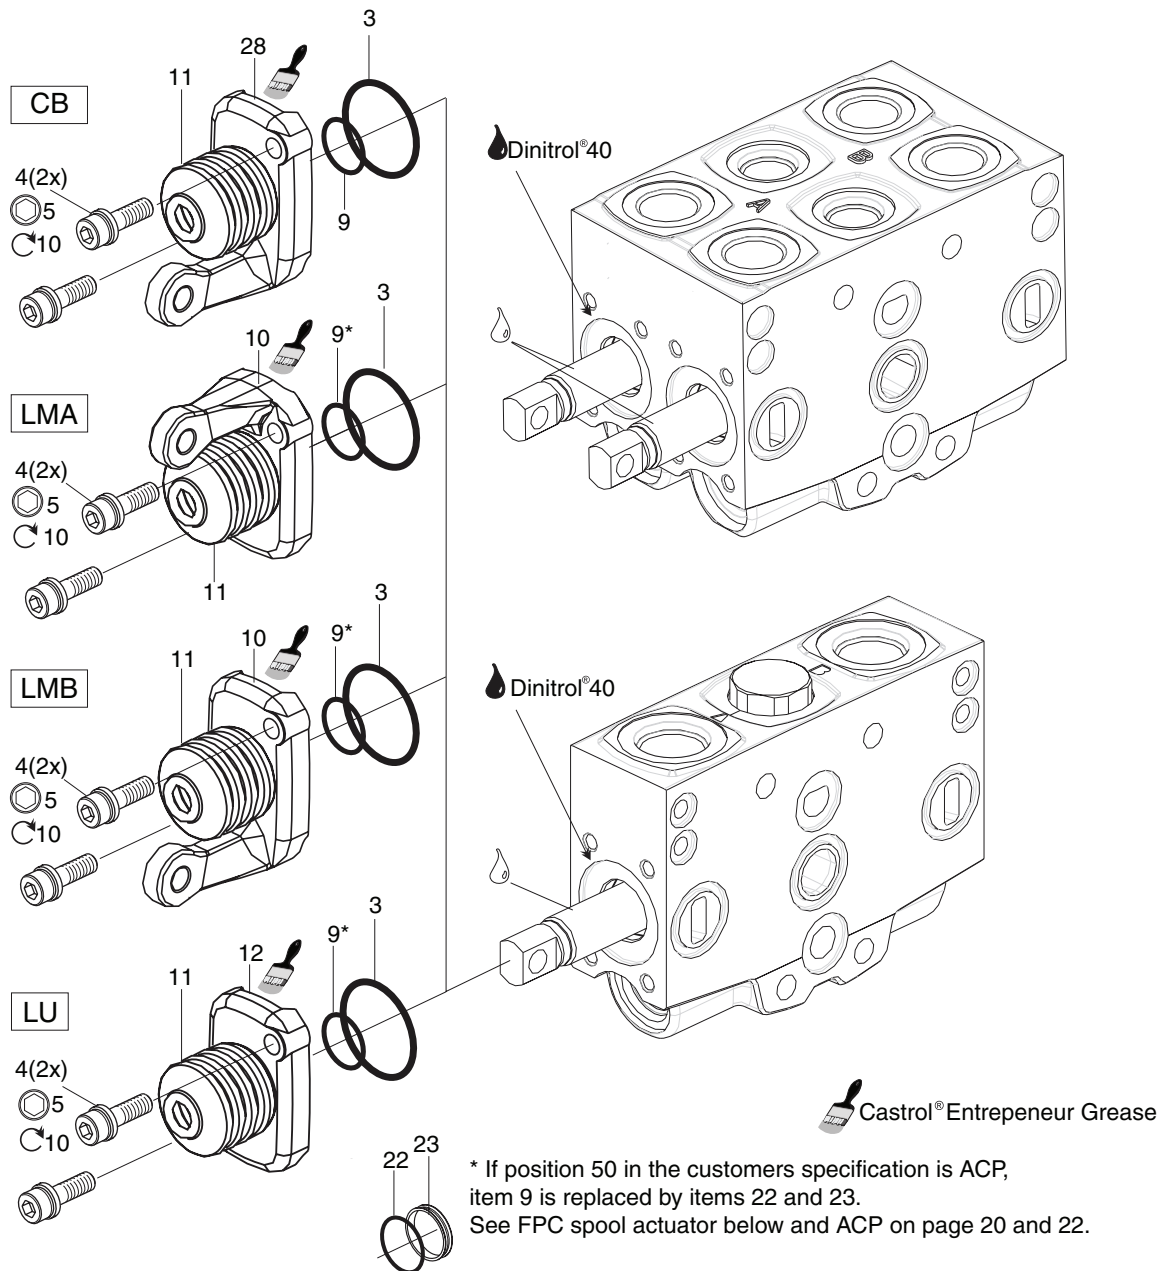

See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
LMA, LMB	51	398000K009	Lever holder kit	3, 4(2x), 9, 10 [11]
LU	51	398000K010	Cover LU	3, 4(2x), 9, 12 [11]
CB	50	398000K073	Lever holder kit CB	3, 4(2x), 28 [9, 11]
ACP	50	398000K806	Seal kit ACP	3(2x), 22, 23
LMA, LMB, LU; CB	51; 50	398000K805	Boot and seal kit LMA, LMB, LU, CB	3, 9(2x), 11
LMA, LMB, LU; CB	51; 50	398000K807	Boot kit	11(6x)
LMA, LMB, LU; CB	51; 50	6760445	Seal kit O-ring	9 (5x)
LMA, LMB + A034	51 + 59	6760215	Lever holder kit scraper A034, LMA, LMB	3, 4(2x), 9, 30 [33]
LU + A034	51 + 59	6760214	Cover scraper A034	3, 4(2x), 9, 31 [33]
CB + A034	51 + 59	6760216	Lever holder kit CB scraper A034	3, 4(2x), 32 [9, 33]
A034	59	393000K807	Seal kit	9(2x), 33

MJA, MJB

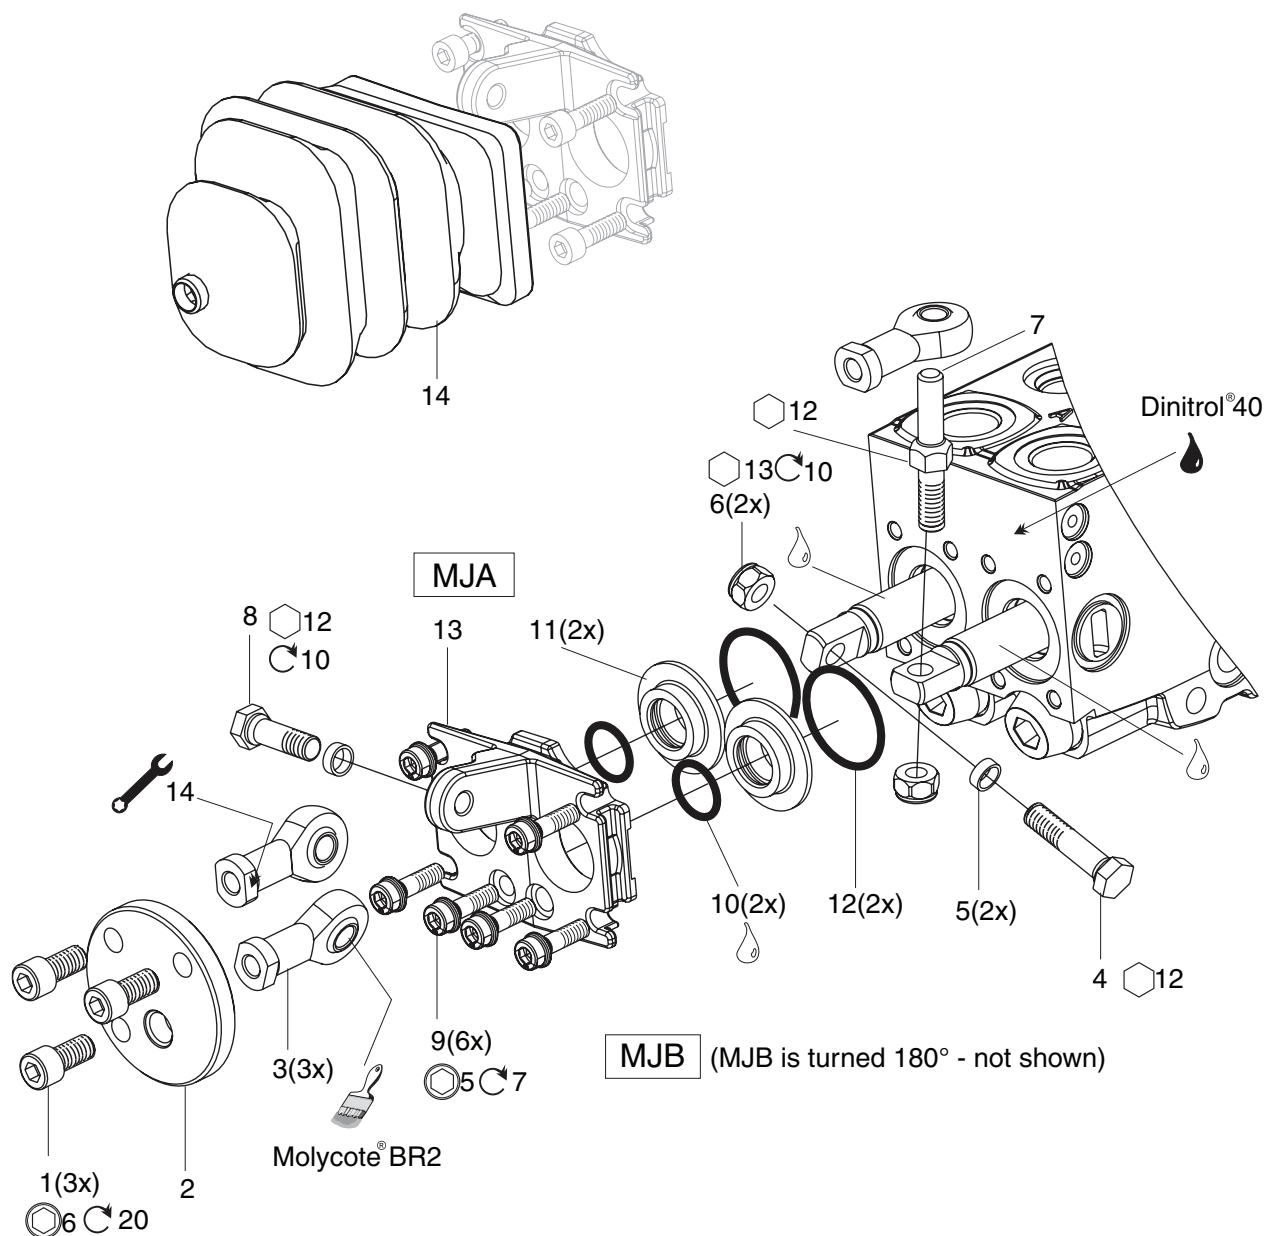


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
MJA, MJB	51	8234939027	Joystick actuator MP7 (MJA, MJB)	1(3x), 2, 3(3x), 4, 5(2x), 6(2x), 7, 8, 9(6x), 10(2x), 11(2x), 12(2x), 13, 14
MJA, MJB	51	398000K808	Joint kit for MP7	1(3x), 3(3x), 4, 5(2x), 6(2x), 7, 8
MJA, MJB	51	6760531	Kit MJ lever bracket	9(6x), 10(2x), 11(2x), 12(2x), 13
MJA, MJB	51	398000K238	Seal kit MP7	10(4x), 12(2x), 14 (A and B side)

C, C140, B2C, CB, SI, TPOL


★

Assembly instructions B 2C and C B

1. Fasten the spool, or fix it against rotation.
2. Assemble o-ring (9) and support ring (14) on spool.
3. Install detent assy (13 or 16) into spool, use Allen key, tighten correctly.
4. Pull out split pin (5) from the detent assembly
5. Assemble spool into valve section.
6. Fasten cap (15 or 25) with screws (4).
7. Tighten screws.

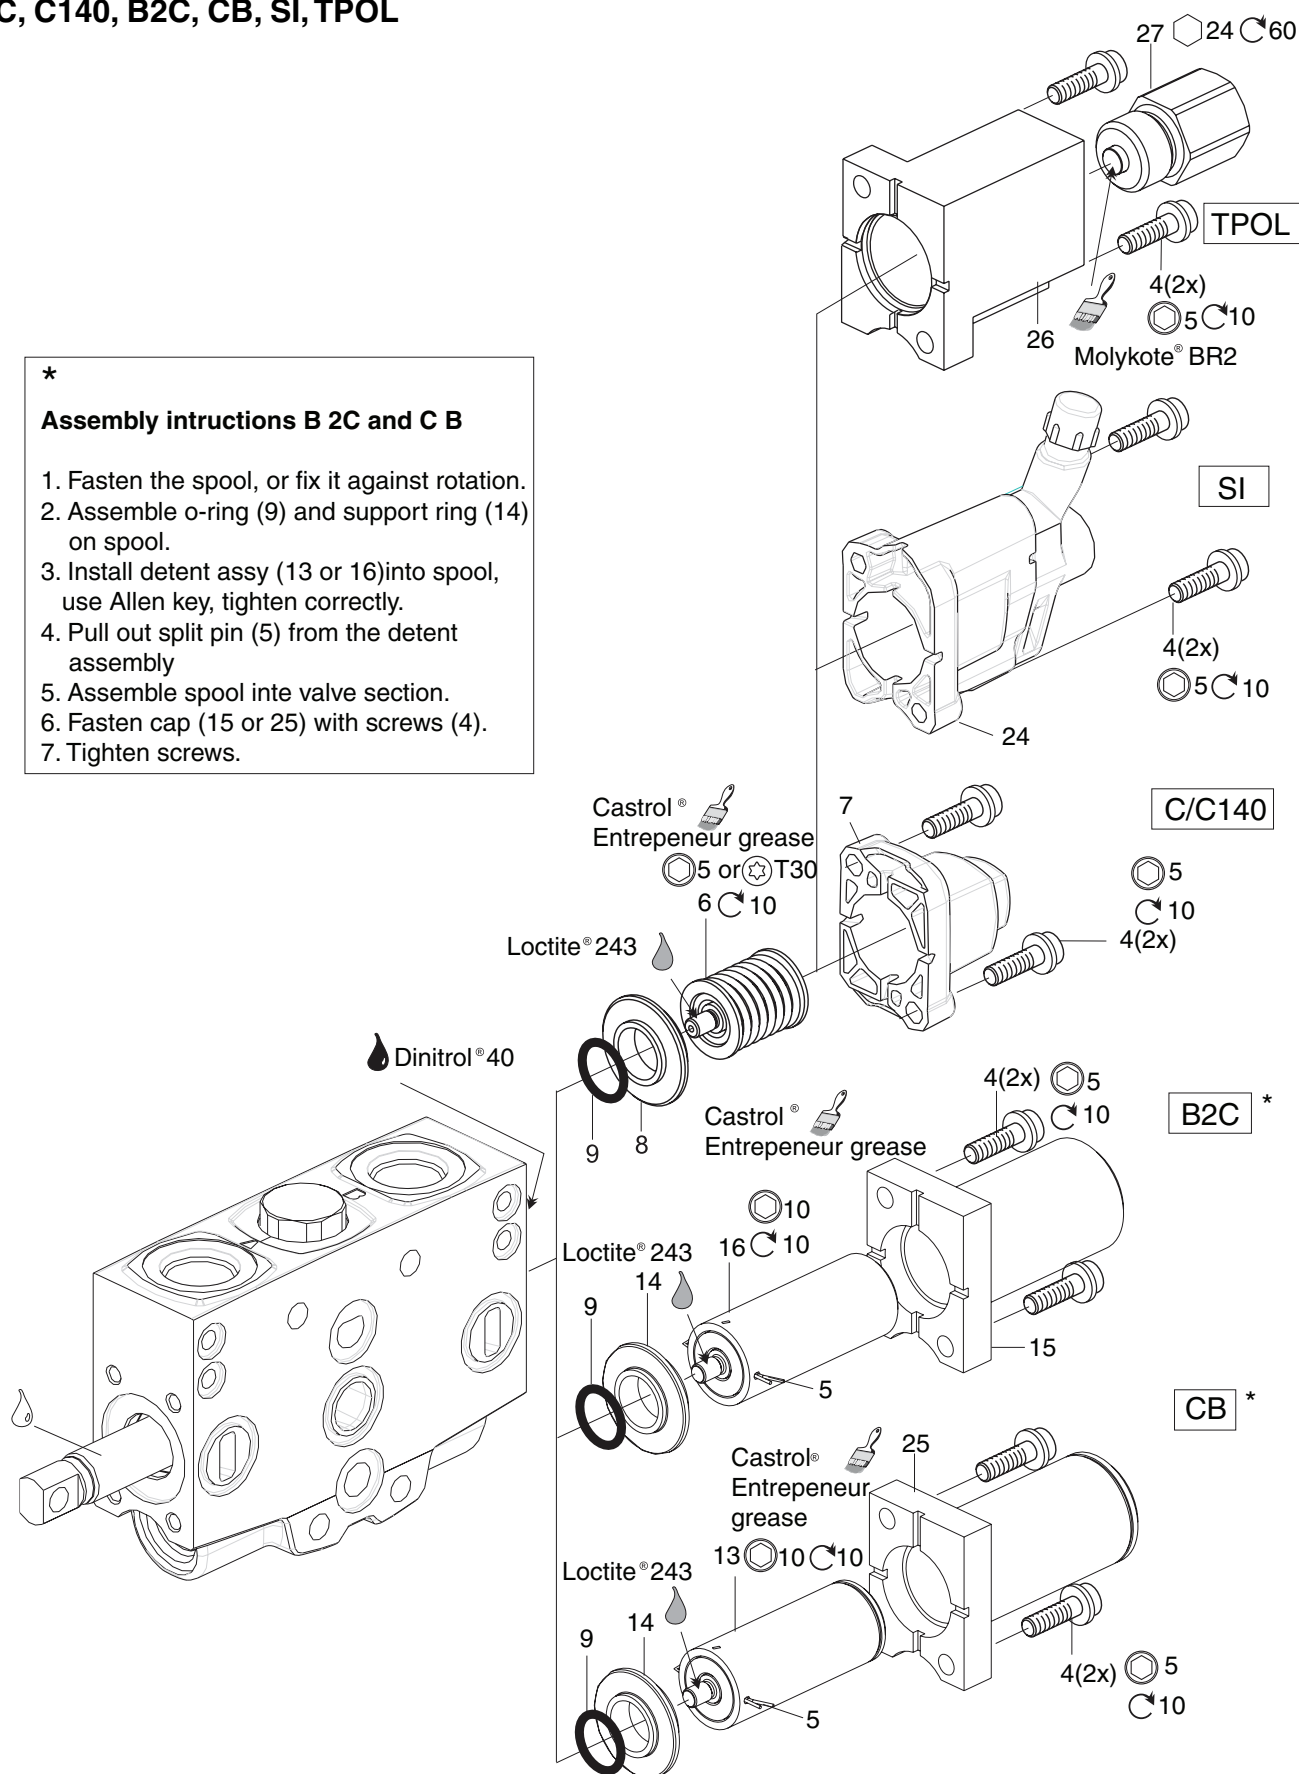


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
C, C140	50	398000K008	Cap kit C, C140	4(2x), 7, 8, 9
C, C140; TPOL, SI	50; 52	6760041	Spring pack, STD, centering force 80 N	6
C+A020	50 + 59	398000K484	Spring pack, C+A020	6 (Valid also for TPOL and SI in pos. 52)
C140	50	6760042	Spring pack, C140, centering force 140 N	6
C140+A020	50 + 59	6760470	Spring pack, C140+A020	6 (Valid also for TPOL and SI in pos. 52)
C, C140; TPOL, SI	50; 52	6760544	Support washer multipack	8(100x)
B2C	50	398000K059	Spool actuator B2C	4(2x), 9, 14, 15, 16 [5]
B2C	50	398000K159	Cap kit B2C	4(2x), 9, 14, 15
B2C	50	398000K259	Spring/detent pack	16 [5]
CB	50	398000K060	Spool actuator CB	4(2x), 9, 13 [5], 14, 25
CB	50	398000K160	Cap kit CB	4(2x), 9, 14, 25
CB	50	398000K260	Spring/detent pack	13 [5]
C, C140, B2C, CB	50	398000K805	Seal kit C, C140, B2C, CB (A- and B- side)	3, 9(2x), 11 (See page 12)
TPOL	52	398000K420	Cap kit, TPOL	4(2x), 8, 9, 26
TPOL	52	6760044	Cylinder assembly, TPOL	27
SI	52	398000K404	Spool position sensor kit	4(2x), 8, 9, 24

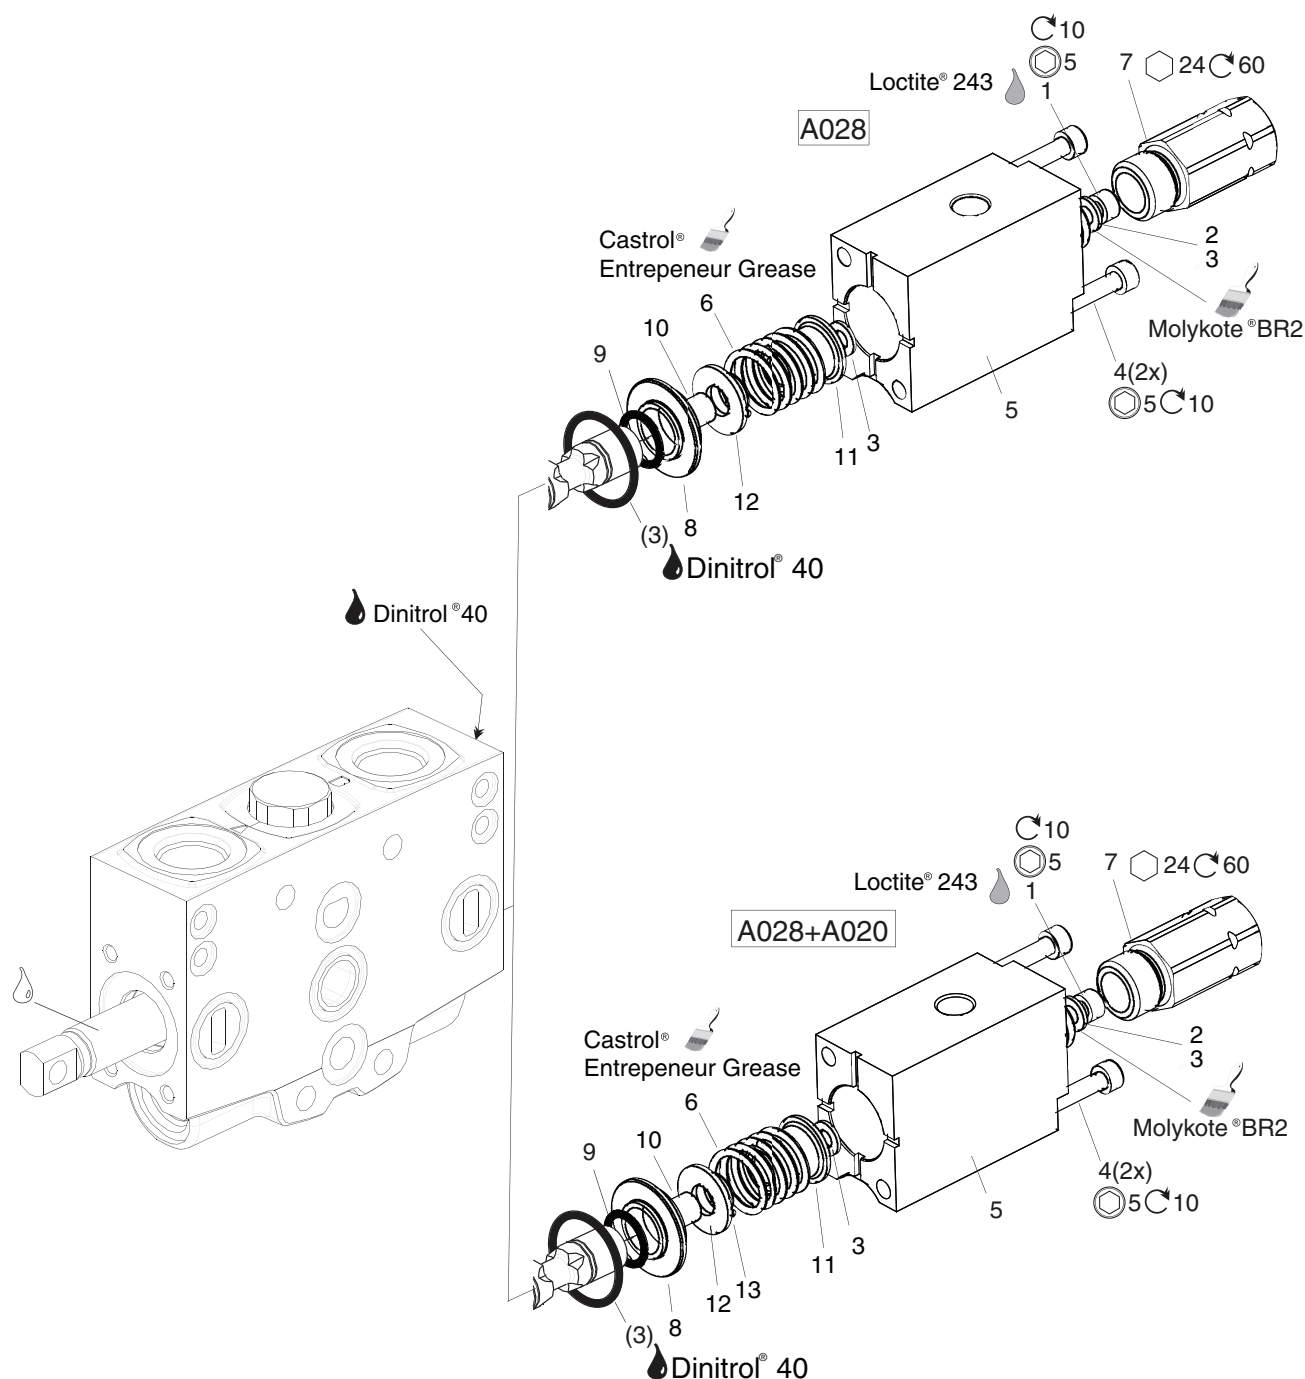A028, A020

Spool Actuators, Side B


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
A028	52	6763508	Cap kit, DT-POL	1, 2, 3, 4(2x), 5
A028	52	6763509	Spring pack, A028 DT-POL	3, 6, 8, 9, 10, 11, 12
A028	52	6763510	Cylinder assembly, DT-POL	7
A028+A020	52, 59C	6763511	Spring pack, A028+A020, DT-POL	3, 6, 8, 9, 10, 11, 12, 13

ACE, 12, 24

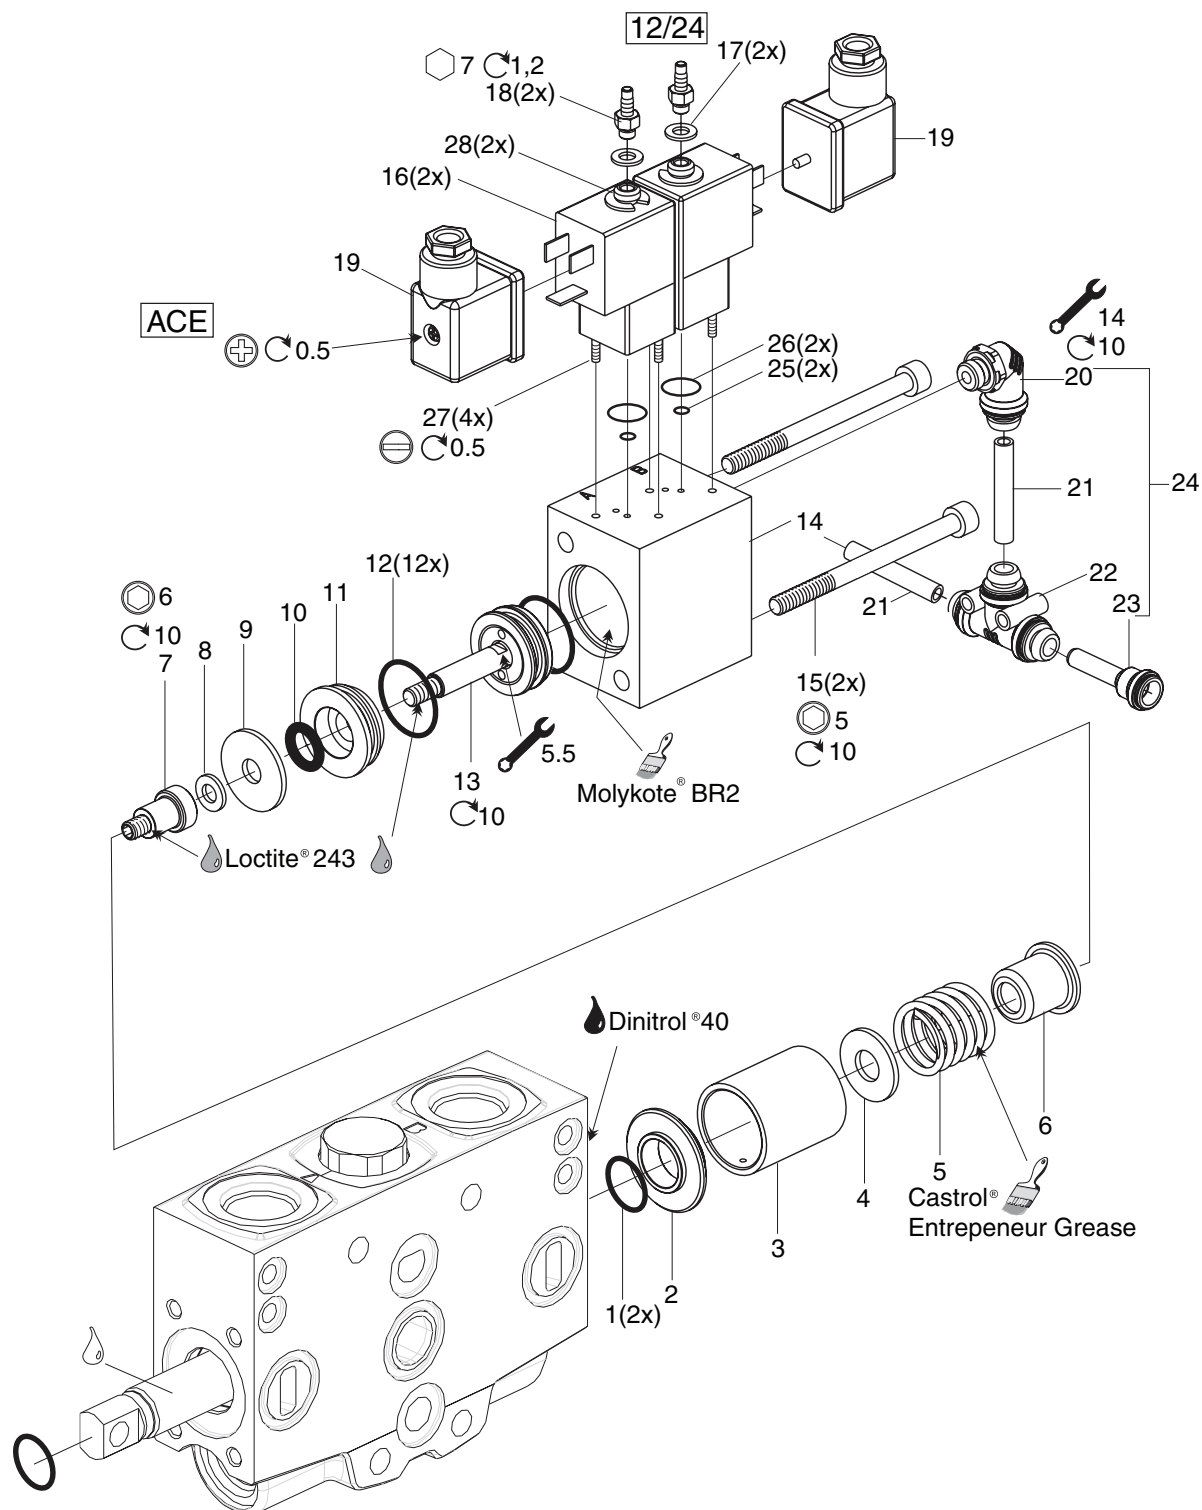


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
ACE + 12	50 + 05	398000K058	Spool actuator ACE, 12 VDC	1(2x), 2, 3, 4, 5, 6, 7, 8, 9, 13 [10, 11, 12(2x)], 14 [16(2x), 17(2x), 18(2x), 19(2x), 25(2x), 26(2x), 27(4x), 28(2x)], 15(2x)
ACE + 24	50 + 05	398000K958	Spool actuator ACE, 24 VDC	1(2x), 2, 3, 4, 5, 6, 7, 8, 9, 13 [10, 11, 12(2x)], 14 [16(2x), 17(2x), 18(2x), 19(2x), 25(2x), 26(2x), 27(4x), 28(2x)], 15(2x)
ACE	50	398000K062	Spring kit for ACE actuator	1(2x), 2, 4, 5, 6, 7
ACE	50	398000K063	Piston kit for ACE actuator	3, 8, 9, 13[10, 11, 12(2x)]
ACE + 12	50 + 05	398000K064	Cylinder housing ACE, 12 VDC	14 [16(2x), 17(2x), 18(2x), 19(2x), 25(2x), 26(2x), 27(4x), 28(2x)], 15(2x)
ACE + 24	50 + 05	398000K964	Cylinder housing ACE, 24 VDC	14 [16(2x), 17(2x), 18(2x), 19(2x), 25(2x), 26(2x), 27(4x), 28(2x)], 15(2x)
ACE	50	393000K808	Seal kit ACE (A- and B-side)	1(2x), 10, 12(2x)
ACE + 12	50 + 05	9123958812	Solenoid valve ACE, 12 VDC	16, 17, 18, 19, 25, 26, 27(2x), 28
ACE + 24	50 + 05	9123958824	Solenoid valve ACE, 24 VDC	16, 17, 18, 19, 25, 26, 27(2x), 28
ACE	50	6760043	Connector kit for sections	24 [20(4x), 21(7x), 22(4x), 23]
ACE	50	-	Connector, inlet (P6F-BEAA146)	20
ACE	50	-	Tube, ø 6 (L=35 mm) (P6T-PN06100)	21
ACE	50	-	Connector, intermediate (P6F-BTS46)	22
ACE	50	-	End plug (P6F-BVP46)	23

ACP

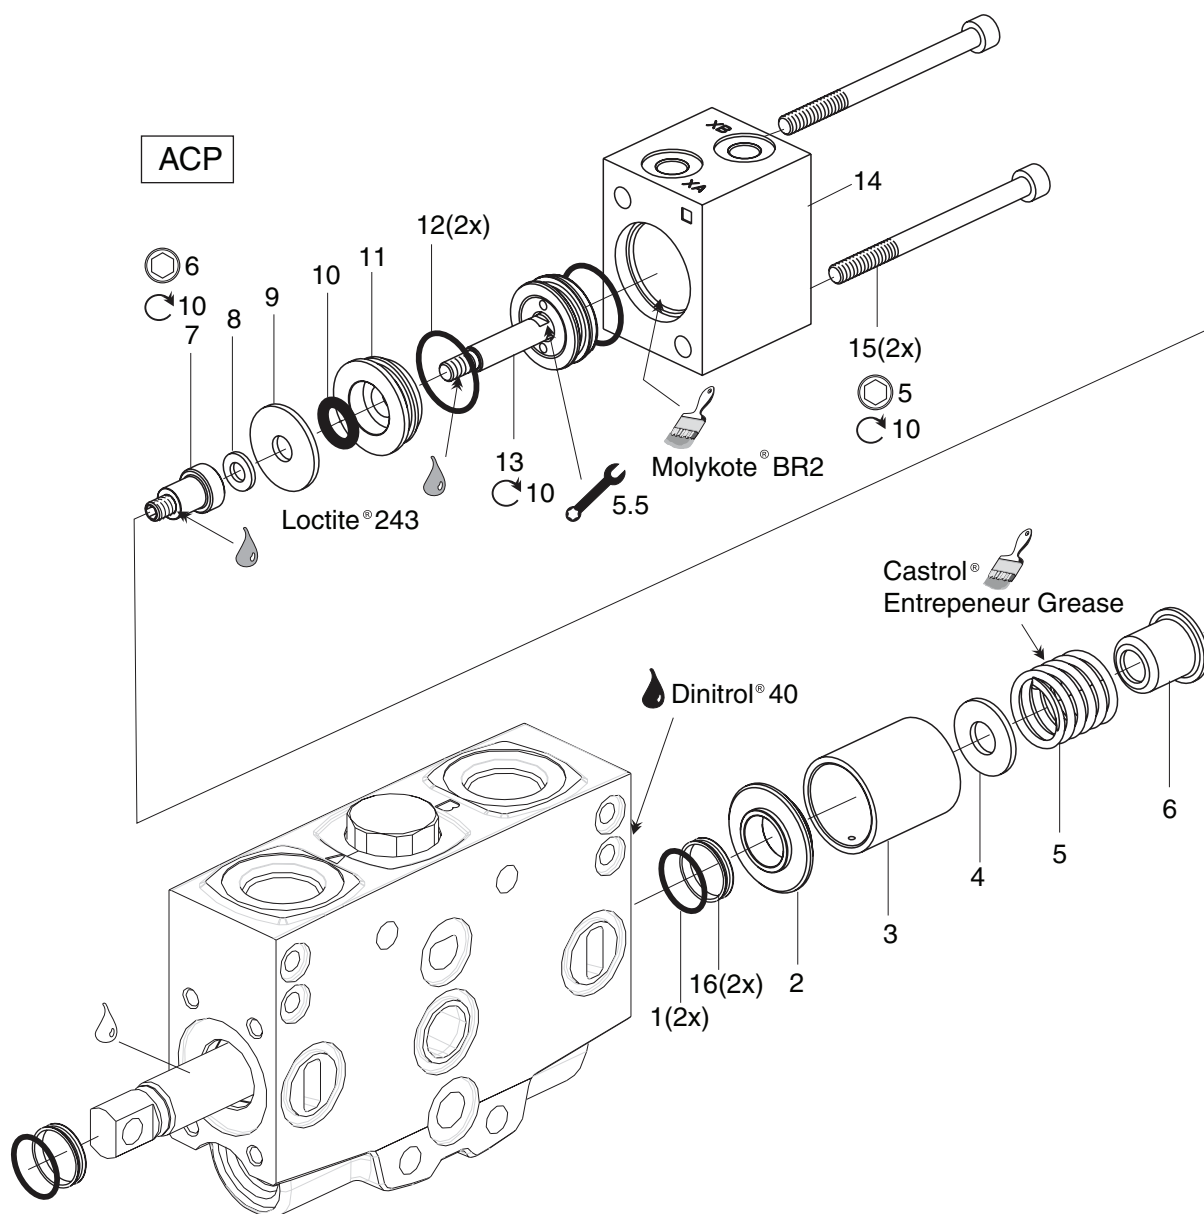


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
ACP + G	50 + 04	398000K292	Spool actuator ACP, BSP	1(2x), 2, 3, 4, 5, 6, 7, 8, 9, 13 [10, 11, 12(2x)], 14, 15(2x), 16(2x)
ACP + U	50 + 04	398000K296	Spool actuator ACP, NPTF	1(2x), 2, 3, 4, 5, 6, 7, 8, 9, 13 [10, 11, 12(2x)], 14, 15(2x), 16(2x)
ACP	50	398000K293	Spring kit for ACP actuator	1(2x), 2, 4, 5, 6, 7, 16(2x)
ACP + G	50 + 04	398000K294	Cylinder kit for ACP actuator, BSP	3, 8, 9, 13 [10, 11, 12(2x)], 14, 15(2x)
ACP + U	50 + 04	398000K297	Cylinder kit for ACP actuator, NPTF	3, 8, 9, 13 [10, 11, 12(2x)], 14, 15(2x)
ACP + G	50 + 04	398000K295	Cylinder housing ACP, BSP	14, 15(2x)
ACP + U	50 + 04	398000K298	Cylinder housing ACP, NPTF	14, 15(2x)
ACP	50	9120079115	Seal kit ACP (A- and B- side)	1(2x), 10, 12(2x), 16(2x)

PC, FPC

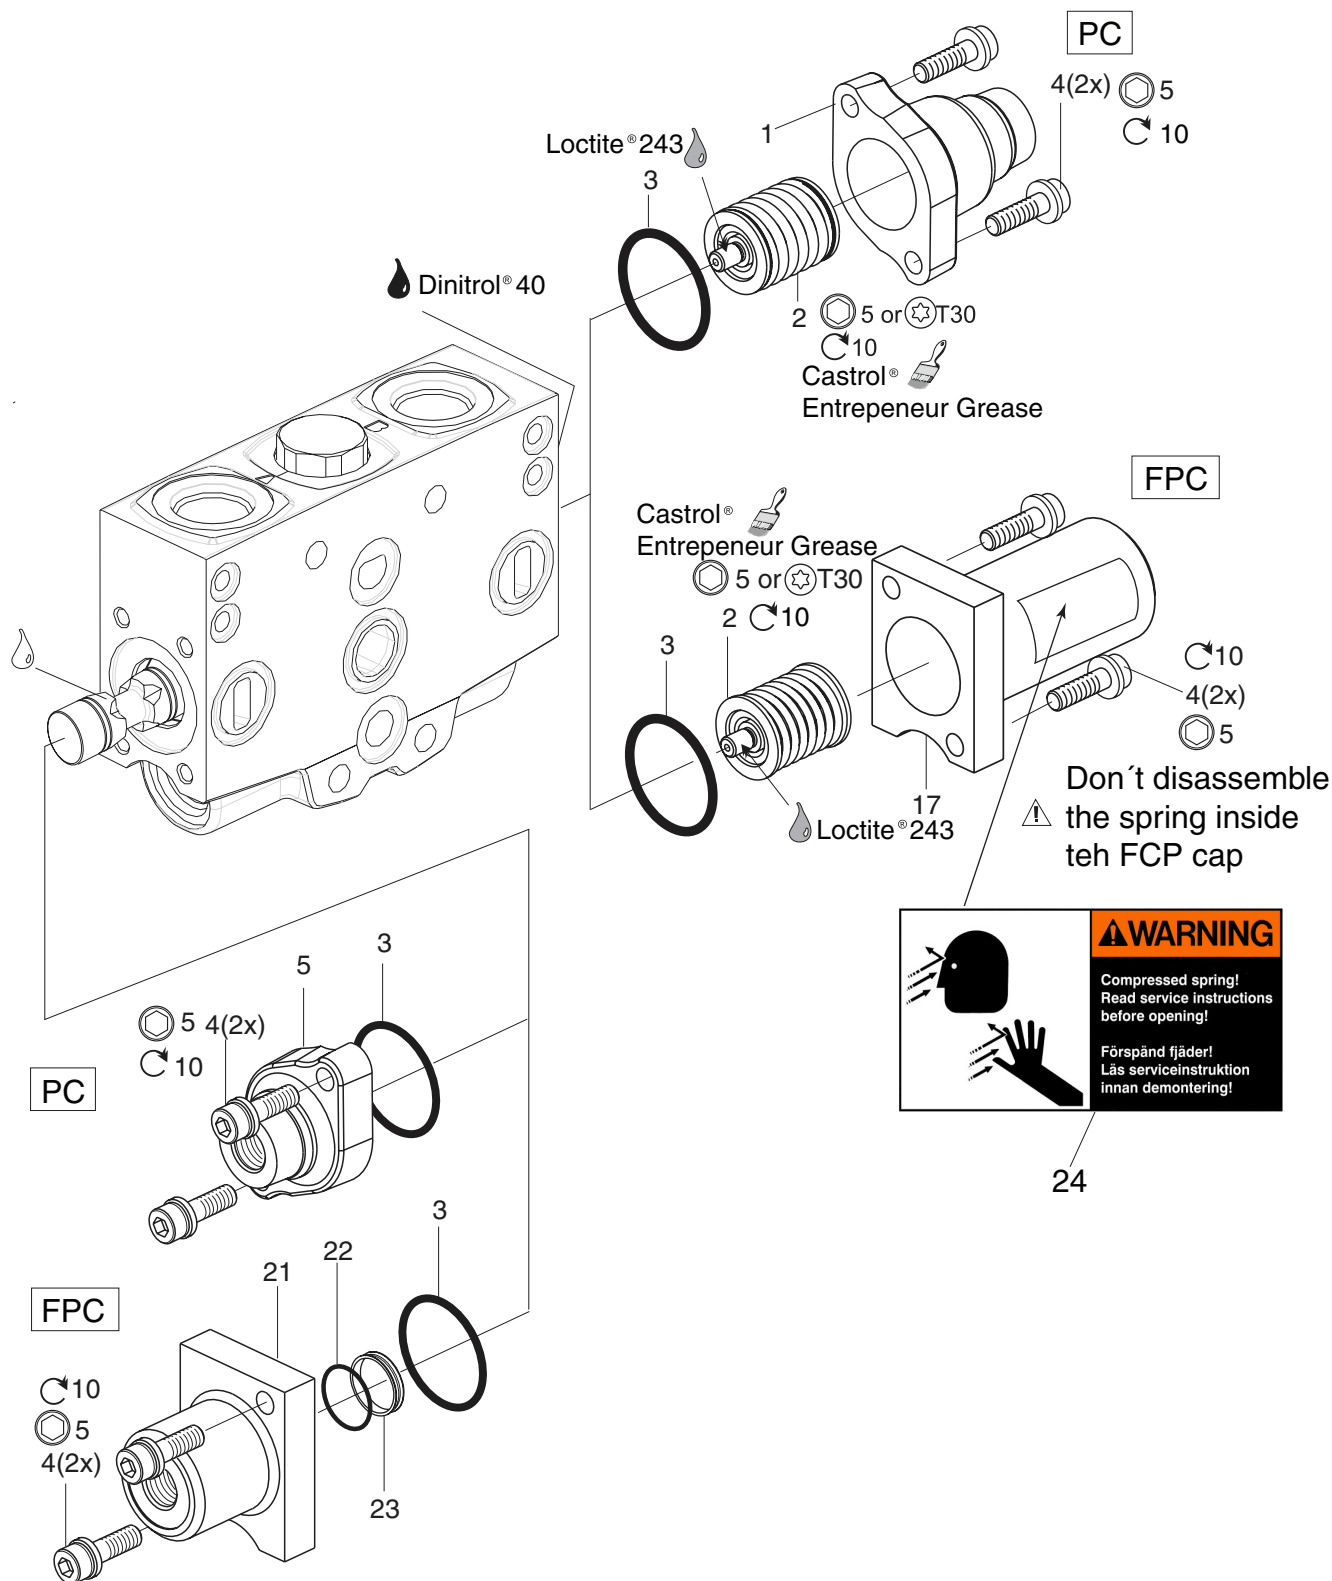


See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
PC + G	50 + 04	398000K001	PC cap kit A-side 'BSP'	3, 4(2x), 5
PC + U	50 + 04	398000K281	PC cap kit A-side 'UNF'	3, 4(2x), 5
PC + G	50 + 04	398000K201	PC cap kit B-side 'BSP'	1, 3, 4(2x)
PC + U	50 + 04	398000K181	PC cap kit B-side 'UNF'	1, 3, 4(2x)
PC, FPC	50	6760048	Spring pack, PC, FPC (5-18) bar	2
PC + A020	50 + 59	398000K023	Spring pack, PC+A020 (5-16) bar	2
FPC + G	50 + 04	398000K067	FPC cap kit A-side 'BSP'	3, 4(2x), 21 [22, 23]
FPC + U	50 + 04	398000K267	FPC cap kit A-side 'UNF'	3, 4(2x), 21 [22, 23]
FPC + G	50 + 04	398000K167	Spool actuator FPC, B-side, 'BSP'	2, 3, 4(2x), 17, 24
FPC + U	50 + 04	398000K367	Spool actuator FPC, B-side, 'UNF'	2, 3, 4(2x), 17, 24
FPC	50	6763170	Sign 'WARNING'	24
PC, FPC	50	398000K806	Seal kit PC, FPC (A- and B- side)	3(2x), 22, 23

ECS, ECH, FECS, SI, CI, A027, H, N, A, D, 12, 24

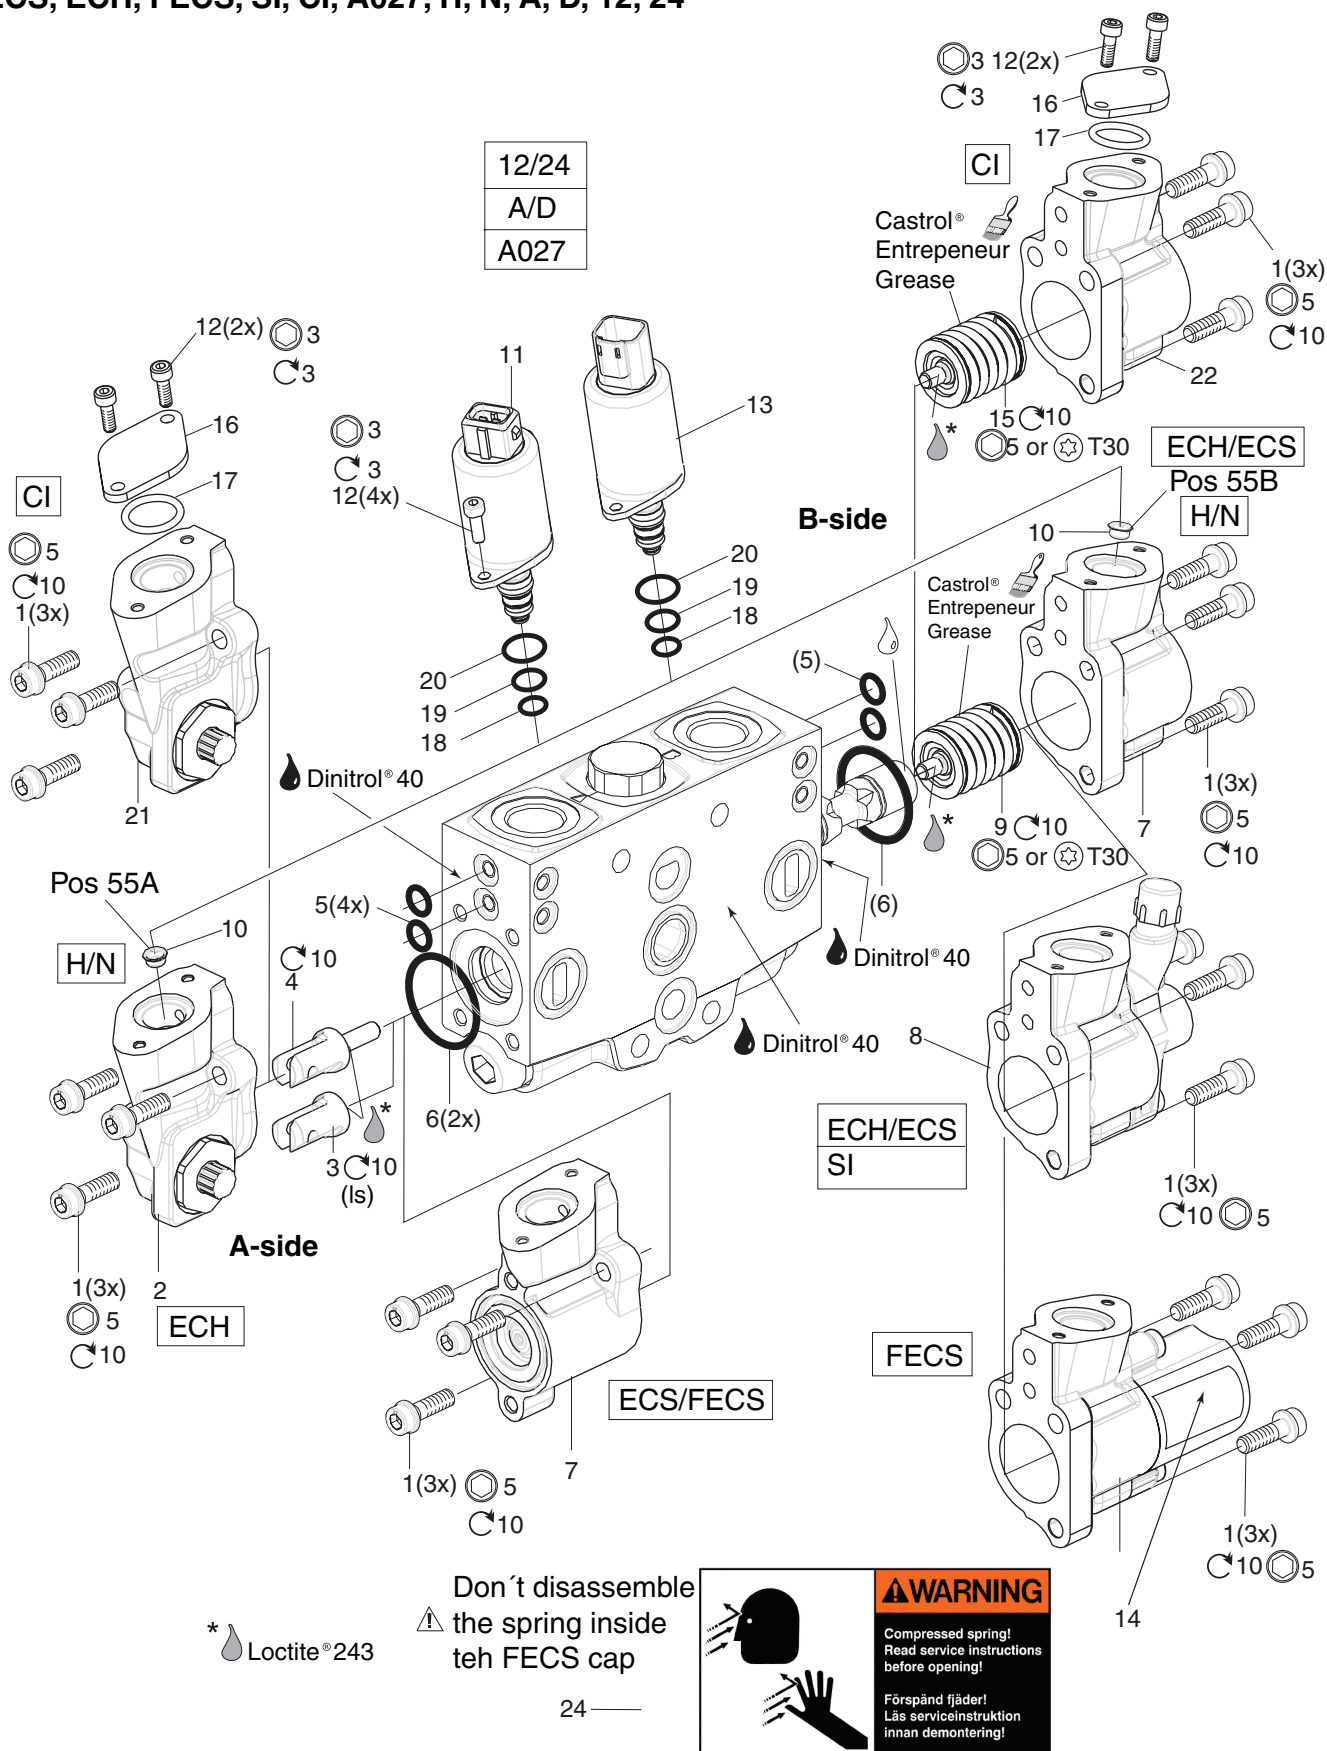

See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
ECH	50	398000ECH2	Actuator ECH, A- side	1(3x), 2
ECH	50	6760046	Spool stud for LS spools	3 (5x) Used if pos 60 are DIs, EAls or MIs
ECH	50	6760047	Spool stud	4 (5x)
ECS, FECS	50	398000ECS2	Actuator cap, A- side	1(3x), 7
ECS, ECH	50	398000ECS2	Actuator cap, B- side	1(3x), 7
FECS	50	6760179	Spool actuator, B- side	1(3x), 14, 24
FECS	50	6763170	Sign 'WARNING'	24
SI	52	398000ESI2	Actuator cap and position sensor	1(3x), 8
		398000ECSK	Seal kit, CI, ECH, ECS, FECS	5(4x), 6(2x)
ECS, ECH, FECS	50	6760048	Spring Pack ECH, ECS, FECS (5-18) bar	9
ECS, ECH, FECS + A020	50 + 59	398000K023	Spring Pack ECS, ECH, FECS+A020 (5-16) bar	9
CI	50	6760352	Spool actuator CI, A- side	1(3x), 21 [12(2x), 16, 17]
CI	50	6760353	Spool actuator CI, B- side	1(3x), 22 [12(2x), 16, 17]
CI	50	6760042	Spring Pack CI, centering force 140 N	15
CI	50	6760354	Seal kit, CI	17(5x)
A + 12	56 + 05	6763059	Solenoid valve, PS25, 12 VDC	11 [18, 19, 20], 12(2x)
A + 24	56 + 05	6763060	Solenoid valve, PS25, 24 VDC	11 [18, 19, 20], 12(2x)
D + 12	56 + 05	6763061	Solenoid valve, PS25, 12 VDC	13 [18, 19, 20], 12(2x)
D + 24	56 + 05	6763062	Solenoid valve, PS25, 24 VDC	13 [18, 19, 20], 12(2x)
A + 12 + A027	56 + 05 + 59	6763063	Solenoid valve (PS25) w. man. override 12 VDC	11 [18, 19, 20], 12(2x)
A + 24 + A027	56 + 05 + 59	6763064	Solenoid valve (PS25) w. man. override 24 VDC	11 [18, 19, 20], 12(2x)
A + 12	56 + 05	6763328	Solenoid valve, PS25MO, 12 VDC	11[18, 19, 20], 12(2x),10
A + 24	56 + 05	6763327	Solenoid valve, PS25MO, 24 VDC	11[18, 19, 20], 12(2x),10
		6760507	Seal kit for PS25	18(5x), 19(5x), 20(5x)
H	55A/55B	398000K601	Pilot orifice ø0.6 mm, marked 6	10 (5x)
N	55A/55B	398000K602	Pilot orifice ø0.9 mm, marked 9	10 (5x)


N, PA, N2, X2, Y2, EA, EB

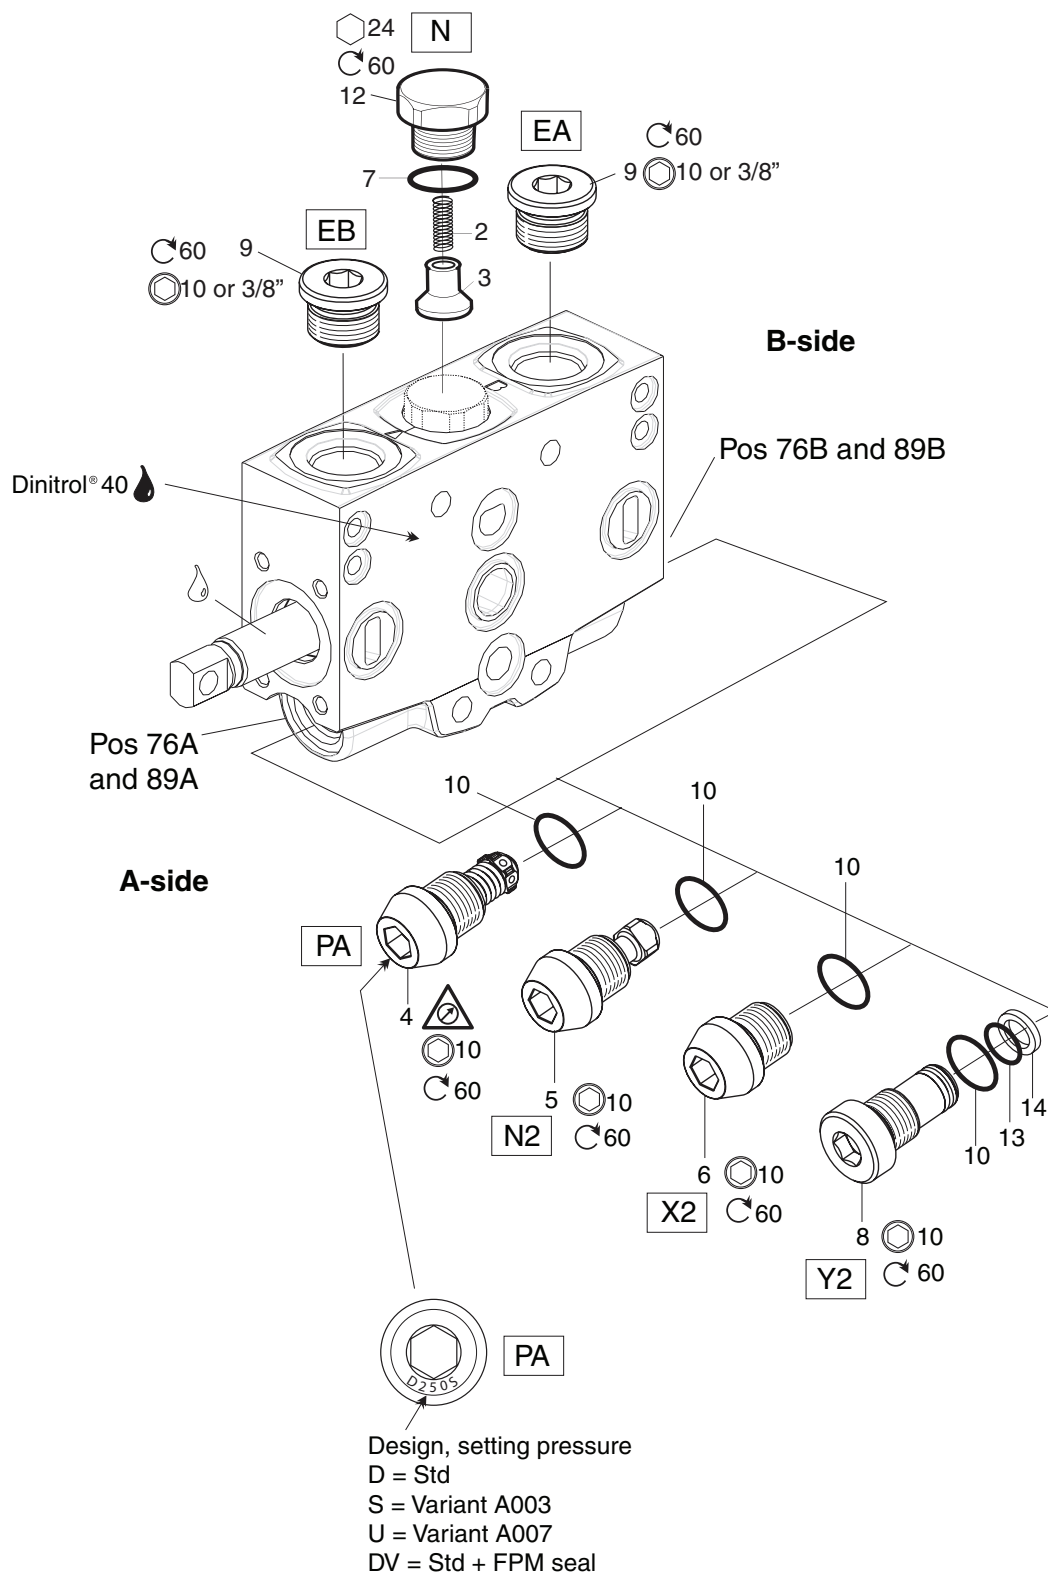

See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
N	66	398000K011	Supply check valve	12 [2, 3, 7]
N	66	6760444	Seal kit, N	7 (5x)
EA, EB + G	60 + 04	-	Plug VST11/2EDCF	9
EA, EB + U	60 + 04	-	Plug 10HP5ON-S	9
N2	76A, 76B	393000K194	Load hold check valve, N2	5 [10]
X2	76A, 76B	393000K193	Cavity plugged (without check valve), X2	6 [10]
Y2	76A, 76B	393000K195	Cavity plugged, Y2	8 [10, 13, 14]
N2, X2, PA	76A, 76B	6760445	Seal kit N2, X2, PA	10 (5x)
Y2	76A, 76B	393000K818	Seal kit, Y2	10, 13, 14


See Customer Specification						
Code	Pos	Part#std [10 l/min]	Part#A003 [20 l/min]	Part#A007 [10 l/min]	Description	Remarks/Items
25	76A, 76B	393000U052		393000U053	PLC053-025	4 [10] 
32	76A, 76B		398000K208		PLC053-032	4 [10] 
40	76A, 76B		398000K209		PLC053-040	4 [10] 
50	76A, 76B	393000K176	398000K301	393000K558	PLC053-050	4 [10] 
63	76A, 76B	393000K177		393000K559	PLC053-063	4 [10] 
80	76A, 76B	393000K178	398000K210	393000K560	PLC053-080	4 [10] 
100	76A, 76B	393000K179	398000K211	393000K561	PLC053-100	4 [10] 
120	76A, 76B		398000K318		PLC053-120	4 [10] 
125	76A, 76B	393000K180	398000K271	393000K562	PLC053-125	4 [10] 
140	76A, 76B	393000K181		393000K563	PLC053-140	4 [10] 
160	76A, 76B	393000K182		393000K564	PLC053-160	4 [10] 
170	76A, 76B		398000K319		PLC053-170	4 [10] 
175	76A, 76B	393000K183		393000K565	PLC053-175	4 [10] 
190	76A, 76B	393000K184		393000K566	PLC053-190	4 [10] 
210	76A, 76B	393000K185	398000K212	393000K567	PLC053-210	4 [10] 
230	76A, 76B	393000K186		393000K568	PLC053-230	4 [10] 
240	76A, 76B	393000K134		398000K249	PLC053-240	4 [10] 
250	76A, 76B	393000K187		393000K569	PLC053-250	4 [10] 
260	76A, 76B	393000K188		393000K570	PLC053-260	4 [10] 
280	76A, 76B	393000K189		393000K571	PLC053-280	4 [10] 
300	76A, 76B	393000K190		393000K572	PLC053-300	4 [10] 
320	76A, 76B	393000K191		393000K573	PLC053-320	4 [10] 
350	76A, 76B	393000K192		393000K574	PLC053-350	4 [10] 
A002 + 280	49 + 76A/B	393000U189			PLC053-280	4 [10]  DV design
A002 + 350	49 + 76A/B	6760734			PLC053-350	4 [10]  DV design
A029 + 100	89* + 76*	398000K515			PLC053-100	4 [10] 
A029 + 160	89* + 76*	398000K516			PLC053-160	4 [10] 
A029 + 250	89* + 76*	6760486			PLC053-250	4 [10] 

T1B, T3B, S, ST, LD, Tie rods

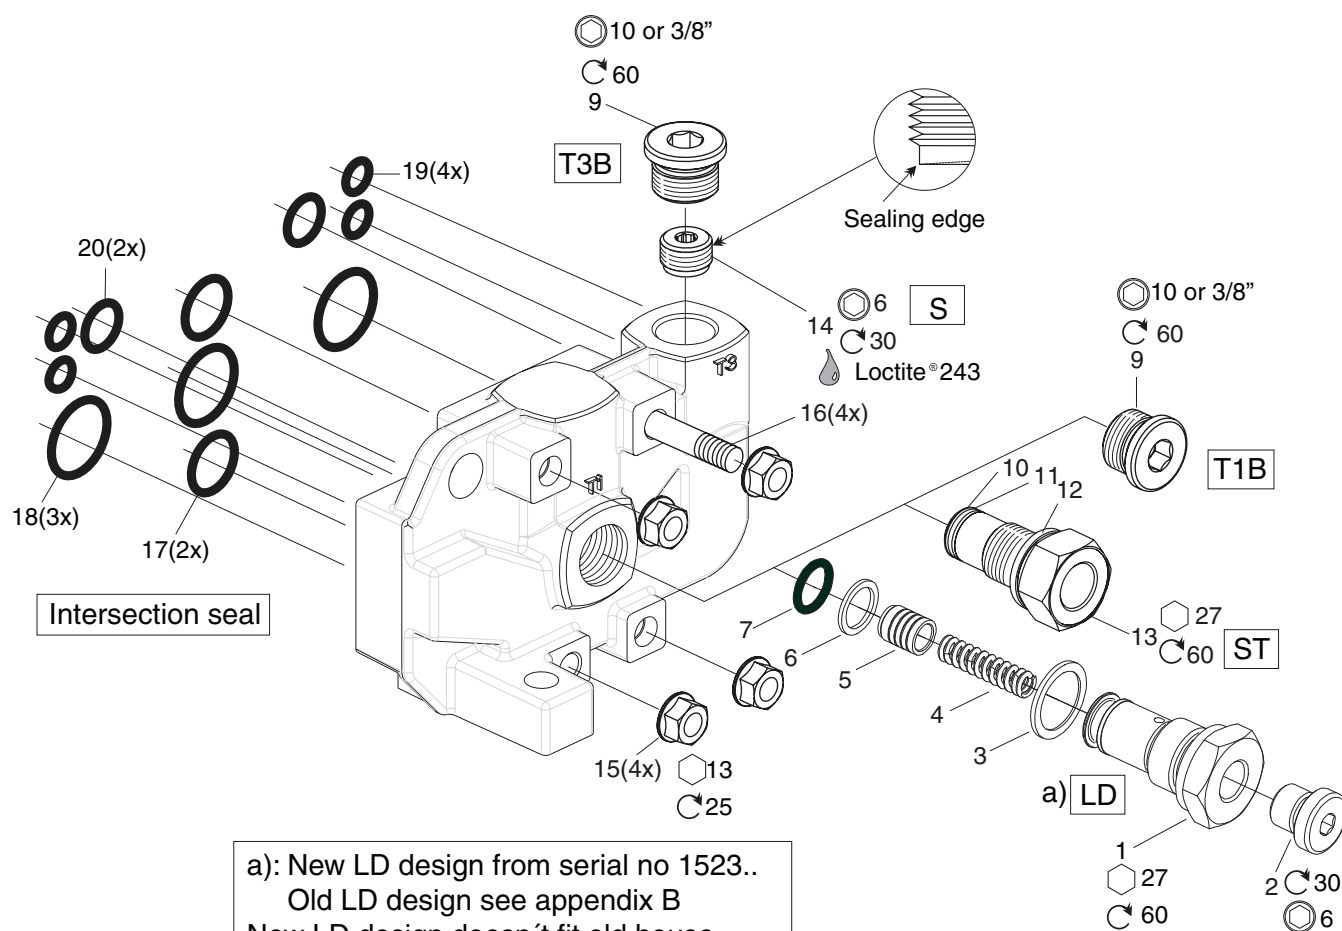

Assembly of tie rods

- 1 Tie rods item 7 to be tightened in the inlet section with 15 Nm.
- 2 Tie rod nuts item 5 to be tightened in 2 steps: 20 Nm and 25 Nm according to the figure below.

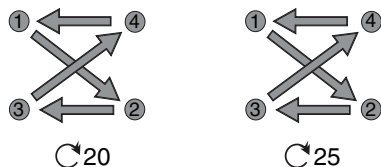

See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
T1B, T3B + G	33, 34 + 04	-	Plug VST11/2EDCF	9
T1B, T3B + U	33, 34 + 04	-	Plug 10HP5ON-S	9
S	36	398000K405	Plug 'S'	14 (Please see Appendix B)
S	36	6760405	Plug 'S'	14 (50x) (Please see Appendix B)
ST + G	33 + 04	6760008	ST adaptor 'BSP'	13 [10, 11, 12]
ST + U	33 + 04	6760009	ST adaptor 'UNF'	13 [10, 11, 12]
ST + G	33 + 04	398000K816	Seal kit ST, BSP	10, 11, 12
ST + U	33 + 04	398000K813	Seal kit ST, UNF	10, 11, 12
LD + G	33 + 04	6763572	Load signal drain, BSP	1 [2, 3, 4, 5, 6, 7]
LD + U	33 + 04	6763573	Load signal drain, UNF	1 [2, 3, 4, 5, 6, 7]
		398000K098	Tie rod kit, 1 section, 115 mm	15(4x), 16(4x)
		398000K099	Tie rod kit, 2 sections, 157 mm	15(4x), 16(4x)
		398000K100	Tie rod kit, 3 sections, 200 mm	15(4x), 16(4x)
		398000K101	Tie rod kit, 4 sections, 242 mm	15(4x), 16(4x)
		398000K102	Tie rod kit, 5 sections, 284 mm	15(4x), 16(4x)
		398000K103	Tie rod kit, 6 sections, 327 mm	15(4x), 16(4x)
		398000K104	Tie rod kit, 7 sections, 369 mm	15(4x), 16(4x)
		398000K105	Tie rod kit, 8 sections, 412 mm	15(4x), 16(4x)
		398000K106	Tie rod kit, 9 sections, 455 mm	15(4x), 16(4x)
		398000K107	Tie rod kit, 10 sections, 498 mm	15(4x), 16(4x)
		398000K003	Tie rod kit, 11 sections, 540 mm	15(4x), 16(4x)
		398000K802	Nut kit	15(4x)
		398000K801	Intersection seal, standard	17(2x), 18(3x), 19(4x) (NBR)
M2	85	6763443	Intersection seal for M2	17(2x), 18(3x), 19(4x), 20(2x) (NBR)
A002	29, 49	398000V801	Intersection seal, FPM 80	17(4x)*, 18(3x), 19(4x) (FPM)

* 2 O-rings comes from item 10, PA, see page 28.

S, R35, /, TP, TPB, TPC, LD, T1B, T3B, PT, PT8

Sealing edge

G = green spool (18)
R = red spool (18)

Only at **U** in pos 04

YS

T3B

9 10 or 3/8" 60

(pos. 36)

S

14 6 Loctite® 243 30

TPB/TPC

10 6 or 1/4" 30

10 6 or 1/4" 30

TPC

30 6 7

31 32

33 19 30

TP/TPB

10 6 or 1/4" 30

R35

16 10 60

/

16 10 60

TP

5 15 Loctite® 243

5 15 21(5x)

18

19

20

21

22

23 6 30

24

25

26

27 6 30

28

29 19 30

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

 
96

97

98


99

100




See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
R35	37	6760010	Reducer spool, size marked Green	16, 18, 19, 20 
R35	37	6760011	Reducer spool, size marked Red	16, 18, 19, 20 
R35	37	398000K053	Pilot reducing valve	16, 19
/, R35	37	398000K061	Plug 1/2" (O-ring), BSP	16
S	39	398000K054	Pilot supply strainer	23, 24, 25, 26
S	39	-	Plug VSTI1/4EDCF	23
YS + G	39 + 04	393000K075	Connection for external filter 'BSP'	27
YS + U	39 + 04	393000K076	Connection for external filter 'UNF'	27, 29
YS + U	39 + 04	-	Nipple 6F4OMXS	29
TP + G	40 + 04	398000K075	Conn. for separate pilot tank, 'BSP'	10, 15
TP + U	40 + 04	398000K275	Conn. for separate pilot tank, 'UNF'	10, 15
TPB + G	40 + 04	-	Plug VSTI1/4EDCF	10
TPB + U	40 + 04	-	Plug 6HP5ON-S	10
TPC + G	40 + 04	301000K857	Internal pilot tank check valve, 'BSP'	30, 31, 32, 33
TPC + U	40 + 04	398000K857	Internal pilot tank check valve, 'UNF'	30, 31, 32, 33
PT + G	33 + 04	398000K050	Counter pressure valve 'BSP'	11, 12, 13
PT + U	33 + 04	398000K051	Counter pressure valve 'UNF'	11, 12, 13
PT8 + G	33 + 04	398000K373	Counter pressure valve 'BSP'	11, 12, 13
PT8 + U	33 + 04	398000K374	Counter pressure valve 'UNF'	11, 12, 13
LD + G	33 + 04	6763572	Load signal drain, BSP	1 [2, 3, 4, 5, 6, 7]
LD + U	33 + 04	6763573	Load signal drain, UNF	1 [2, 3, 4, 5, 6, 7]
T1B, T3B + G	33, 34 + 04	-	Plug VSTI1/2EDCF	9
T1B, T3B + U	33, 34 + 04	-	Plug 10HP5ON-S	9
S	36	398000K405	Series connection plug	14
S	36	6760405	Series connection plug	14 (50x)
		-	Plug VSTI1/8EDCF	21

Symbol	Description
	For optimum function, the radial clearance between spool and spool bore must be correct. Spools are therefore colour-coded to identify sizes. We recommend that the whole valve/section is changed if the spool has to be replaced (valve housings cannot be purchased as spares, so if a new one is required a new valve or complete section should be ordered). If the spool has to be changed, it is extremely important that the new spool is the right size. If the spool is too large, it will not work properly even if it appears to function perfectly on assembly, and if the spool is too small, function will also be adversely affected. Spools that are classified by size are marked in the list with . The colour-marking of the spool may disappear after a time, so, unless otherwise stated, the housing is marked with a letter to indicate the respective colour as follows: B for Blue, G for Green, R for Red.
	Changing the settings, replacing the preset pressure relief valve or breaking the seal must only be done in accordance with the manufacturer's instructions. Other settings may seriously damage the machine and other assets, and may cause personal injury. Note that a value contained in the customer specification manual does not apply if the manufacturer changed the settings at installation. Always contact the manufacturer's service organisation before servicing items marked with .

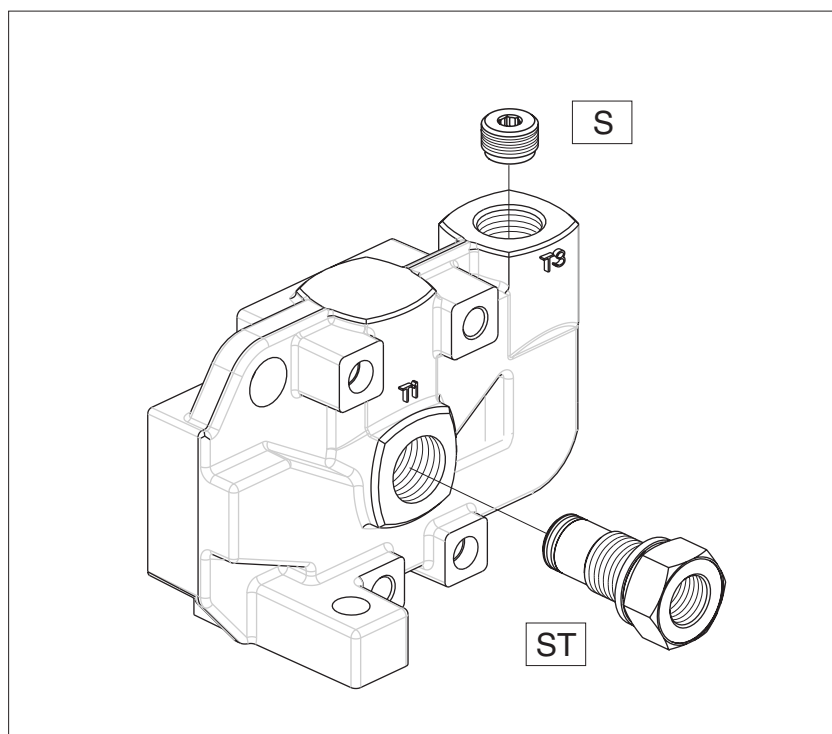S - plug in Tank Gallery

Using S-plug in Tank Gallery in combination with conventional outlet, Option US, and system pressures higher than 250 bar may cause a decrease of the section's lifetime.

Recommendation: use outlet option ST if system pressures go beyond 250 bar.

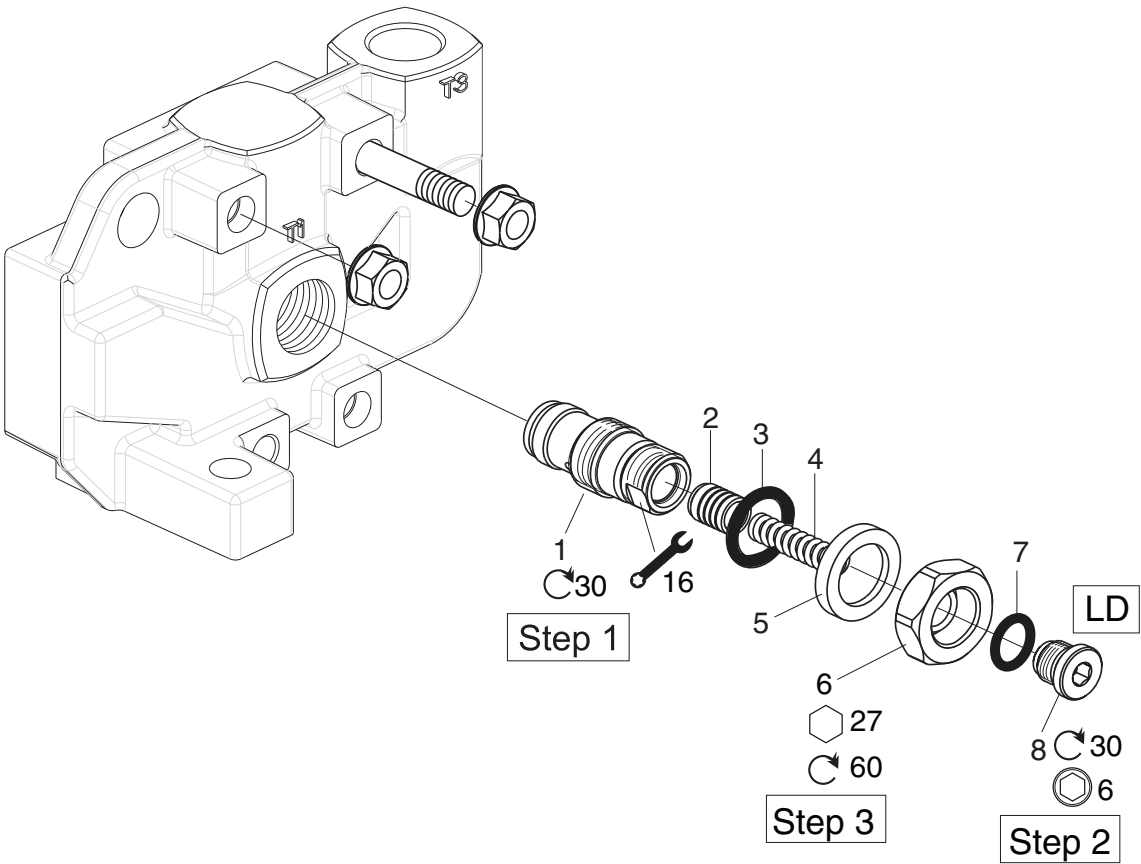


Ref. item 1.

- Step 1. Assemble item 1, tighten 30 Nm.
Step 2. Assemble items 2, 4, 7 and 8. Tighten item 8: 30 Nm.
Step 3. Assemble item 3, 5 and 6. Tighten item 6: 60 Nm.

New LD from serial no 1523....
Old LD up to serial no 1522....
New LD design doesn't fit old house

See Customer Specification				
Code	Pos	Part	Description	Remarks / Items
LD + G	33 + 04	398000K538	Load signal drain, BSP	1 [2, 3, 4, 5, 6, 7, 8]
LD + U	33 + 04	398000K539	Load signal drain, UNF	1 [2, 3, 4, 5, 6, 7, 8]
LD	33	398000K540	Seal kit LD	3, 7
LD	33	6761089	Spring kit LD	4

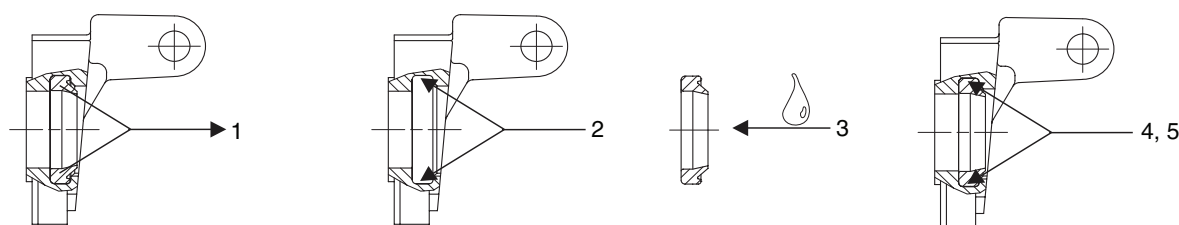Removal and mounting of scraper ring

1. Remove carefully the old scraper ring (not spring loaded) to avoid damaging of the lever bracket. Use as tool a screwdriver, a nippers or a small hook.

2. Clear scraper ring groove and make sure there are no color or paint flakes remaining in the track.

3 The scraper ring with associated surfaces in the lever bracket must be oiled.

4. Push the new scraper ring in the lever brackets track.

Parker Worldwide

Europe, Middle East, Africa

AE – United Arab Emirates,
Dubai

Tel: +971 4 8127100
parker.me@parker.com

AT – Austria, Wiener Neustadt

Tel: +43 (0)2622 23501-0
parker.austria@parker.com

AT – Eastern Europe, Wiener
Neustadt

Tel: +43 (0)2622 23501 900
parker.easteurope@parker.com

AZ – Azerbaijan, Baku

Tel: +994 50 22 33 458
parker.azerbaijan@parker.com

BE/LU – Belgium, Nivelles

Tel: +32 (0)67 280 900
parker.belgium@parker.com

BG – Bulgaria, Sofia

Tel: +359 2 980 1344
parker.bulgaria@parker.com

BY – Belarus, Minsk

Tel: +48 (0)22 573 24 00
parker.poland@parker.com

CH – Switzerland, Etoy

Tel: +41 (0)21 821 87 00
parker.switzerland@parker.com

CZ – Czech Republic, Klecany

Tel: +420 284 083 111
parker.czechrepublic@parker.com

DE – Germany, Kaarst

Tel: +49 (0)2131 4016 0
parker.germany@parker.com

DK – Denmark, Ballerup

Tel: +45 43 56 04 00
parker.denmark@parker.com

ES – Spain, Madrid

Tel: +34 902 330 001
parker.spain@parker.com

FI – Finland, Vantaa

Tel: +358 (0)20 753 2500
parker.finland@parker.com

FR – France, Contamine s/Arve

Tel: +33 (0)4 50 25 80 25
parker.france@parker.com

GR – Greece, Athens

Tel: +30 210 933 6450
parker.greece@parker.com

HU – Hungary, Budaoers

Tel: +36 23 885 470
parker.hungary@parker.com

IE – Ireland, Dublin

Tel: +353 (0)1 466 6370
parker.ireland@parker.com

IT – Italy, Corsico (MI)

Tel: +39 02 45 19 21
parker.italy@parker.com

KZ – Kazakhstan, Almaty

Tel: +7 7273 561 000
parker.easteurope@parker.com

NL – The Netherlands, Oldenzaal

Tel: +31 (0)541 585 000
parker.nl@parker.com

NO – Norway, Asker

Tel: +47 66 75 34 00
parker.norway@parker.com

PL – Poland, Warsaw

Tel: +48 (0)22 573 24 00
parker.poland@parker.com

PT – Portugal

Tel: +351 22 999 7360
parker.portugal@parker.com

RO – Romania, Bucharest

Tel: +40 21 252 1382
parker.romania@parker.com

RU – Russia, Moscow

Tel: +7 495 645-2156
parker.russia@parker.com

SE – Sweden, Spånga

Tel: +46 (0)8 59 79 50 00
parker.sweden@parker.com

SK – Slovakia, Banská Bystrica

Tel: +421 484 162 252
parker.slovakia@parker.com

SL – Slovenia, Novo Mesto

Tel: +386 7 337 6650
parker.slovenia@parker.com

TR – Turkey, Istanbul

Tel: +90 216 4997081
parker.turkey@parker.com

UA – Ukraine, Kiev

Tel: +48 (0)22 573 24 00
parker.poland@parker.com

UK – United Kingdom, Warwick

Tel: +44 (0)1926 317 878
parker.uk@parker.com

ZA – South Africa, Kempton Park

Tel: +27 (0)11 961 0700
parker.southafrica@parker.com

North America

CA – Canada, Milton, Ontario

Tel: +1 905 693 3000

US – USA, Cleveland

(industrial)
Tel: +1 216 896 3000

US – USA, Elk Grove Village

(mobile)
Tel: +1 847 258 6200

Asia Pacific

AU – Australia, Castle Hill

Tel: +61 (0)2-9634 7777

CN – China, Shanghai

Tel: +86 21 2899 5000

HK – Hong Kong

Tel: +852 2428 8008

ID – Indonesia, Tangerang

Tel: +62 21 7588 1906

IN – India, Mumbai

Tel: +91 22 6513 7081-85

JP – Japan, Fujisawa

Tel: +81 (0)4 6635 3050

KR – South Korea, Seoul

Tel: +82 2 559 0400

MY – Malaysia, Shah Alam

Tel: +60 3 7849 0800

NZ – New Zealand, Mt Wellington

Tel: +64 9 574 1744

SG – Singapore

Tel: +65 6887 6300

TH – Thailand, Bangkok

Tel: +662 186 7000

TW – Taiwan, New Taipei City

Tel: +886 2 2298 8987

VN – Vietnam, Ho Chi Minh City

Tel: +84 8 3999 1600

South America

AR – Argentina, Buenos Aires

Tel: +54 3327 44 4129

BR – Brazil, Cachoeirinha RS

Tel: +55 51 3470 9144

CL – Chile, Santiago

Tel: +56 2 623 1216

MX – Mexico, Toluca

Tel: +52 72 2275 4200

Ed. 2016-04-04

© 2016 Parker Hannifin Corporation. All rights reserved.



EMEA Product Information Centre

Free phone: 00 800 27 27 5374

(from AT, BE, CH, CZ, DE, DK, EE, ES, FI, FR, IE, IL,
IS, IT, LU, MT, NL, NO, PL, PT, RU, SE, SK, UK, ZA)

US Product Information Centre

Toll-free number: 1-800-27 27 537

www.parker.com

Your local authorized Parker distributor