

## Valve Pv90: Inlet section, replacement kit V2360 and V2361

Spare parts

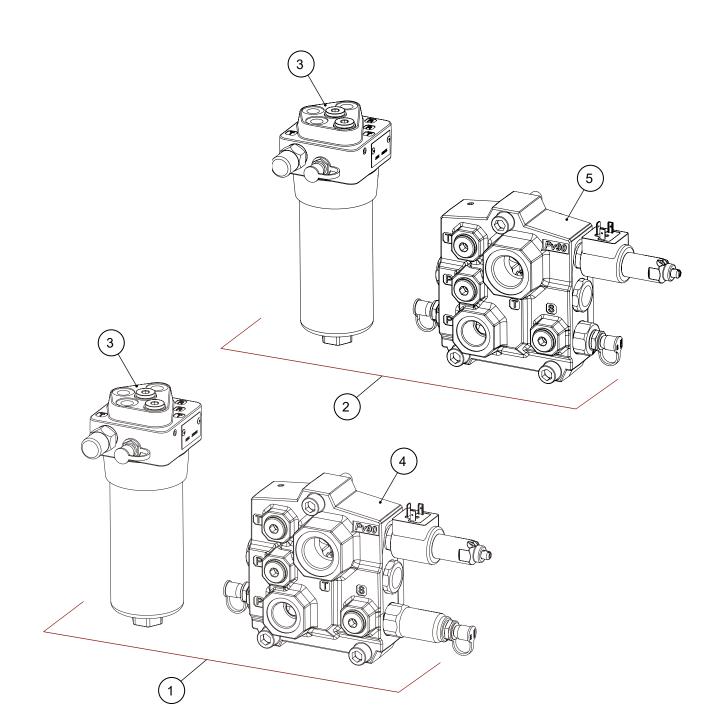

Pos.	Part no.	Description	Note
1	V2360	Kit Inlet section F13 Pv90 + PRF	Replaces inlet section V0730 and V0738
2	V2361	Kit inlet section V50 Pv90 + PRF	Replaces inlet section V0732, V0735, V0736 and V0737
3	0580	Pressure reducer/filter PRF, complete	See page 30
4	V2160	Inlet section F Pv90, complete	See page 7
5	V2161	Inlet section V Pv90, complete	See page 8

Spare parts

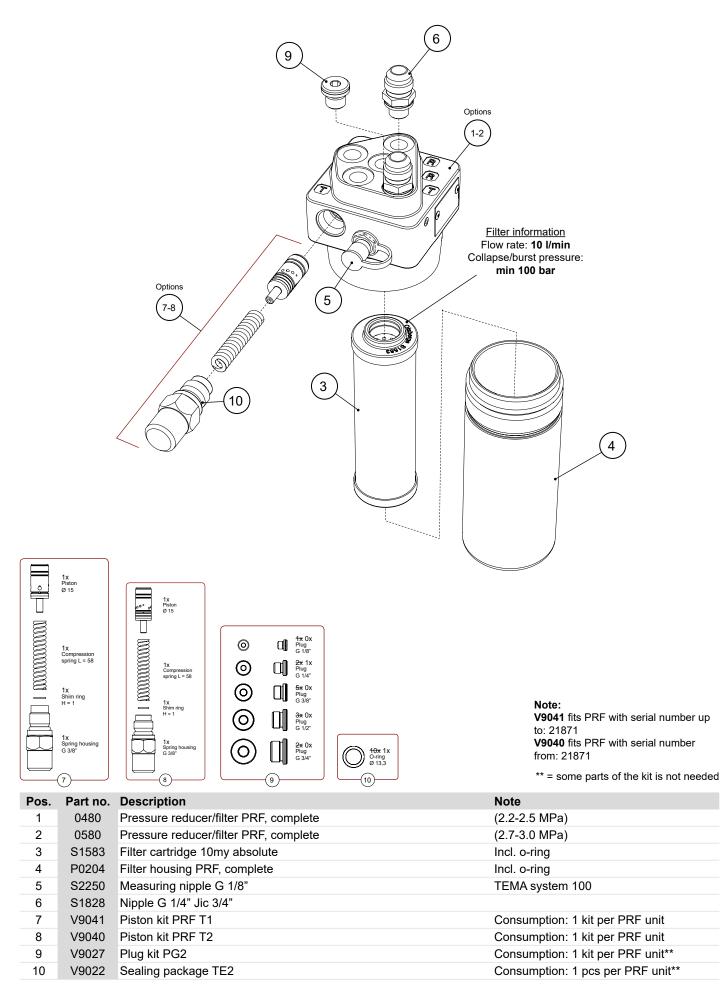


## Instructions - Pressure reducer / filter PRF

Replacement of filter cartridge, article no. S1583

## To prevent dirt from entering the unit.

Do not unpack the filter cartridge until you are ready to mount it.

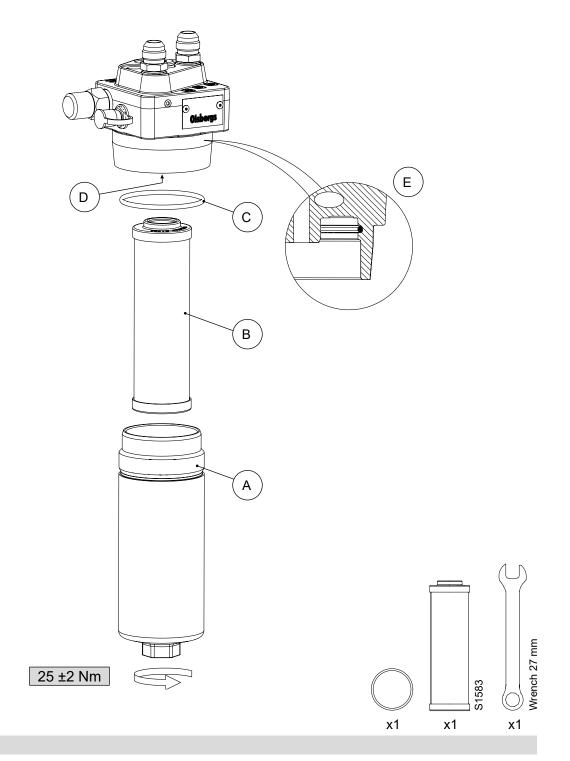

## Instructions

- 1. Carefully clean the filter cover (A) and the area (D) on the housing.
- 2. Remove the filter cover (A) using a 27 mm wrench.
- 3. Remove the old filter cartridge.
- 4. Remove the old O-ring  $\widehat{\mathbf{C}}(\mathbf{E})$  and replace it with the supplied one (oil it before assembly).
- 5. Add new grease to the threads of the filter cover. (A)
- 6. Unpack the new filter cartridge (art.S1583), make sure it's clean and mount it.
- 7. Remount the filter cover and tighten it, torque 25 ±2 Nm.