



THE GAS SPRING MUST BE MOUNTED WITH THE LEG IN 170°  
NOTE MOUNTING DIRECTION OF GAS SPRING