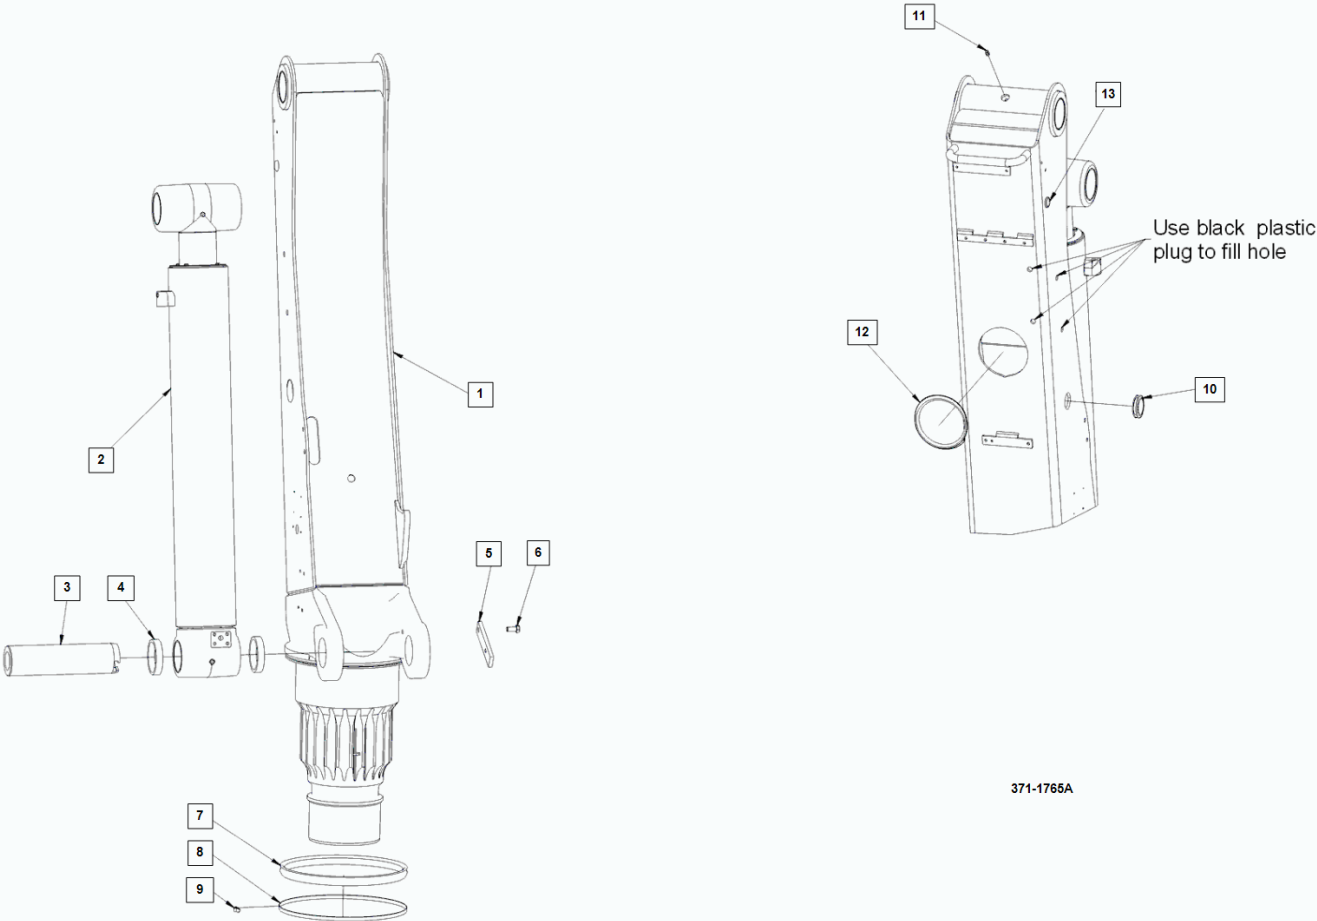


Model:166 K
Chapter 2 Base**3711765**
Column 166 B; D


3711765 - Column 166 B; D		Pos	Part No	Description	Quantity
 371-1765A		1	3691071	COLUMN	1
		2	3708748	HYDRAULIC CYLINDER	1
		3	3706150	SHAFT	1
		4	3723801	LOCKING NUT	2
		5	3719375	SECURING PLATE	1
		6	9924345	SCREW	1
		7	3413012	SEAL RING	1
		8	3199924	CLAMPING RING	1
		9	9919911	CLIP	1
		10	3629465	MEMBRANE LEAD-IN	1
		11	9945768	GREASE NIPPLE	1
		12	3717631	RING	1
		13	9864091		2

Model:166 K
Chapter 2 Column 166 B; D

3717836
Connection LHV 1st boom cylinder

3717836 - Connection LHV 1st boom cylinder

FOR HOSES SEE HOSES AND COUPLINGS
V50 AND V80

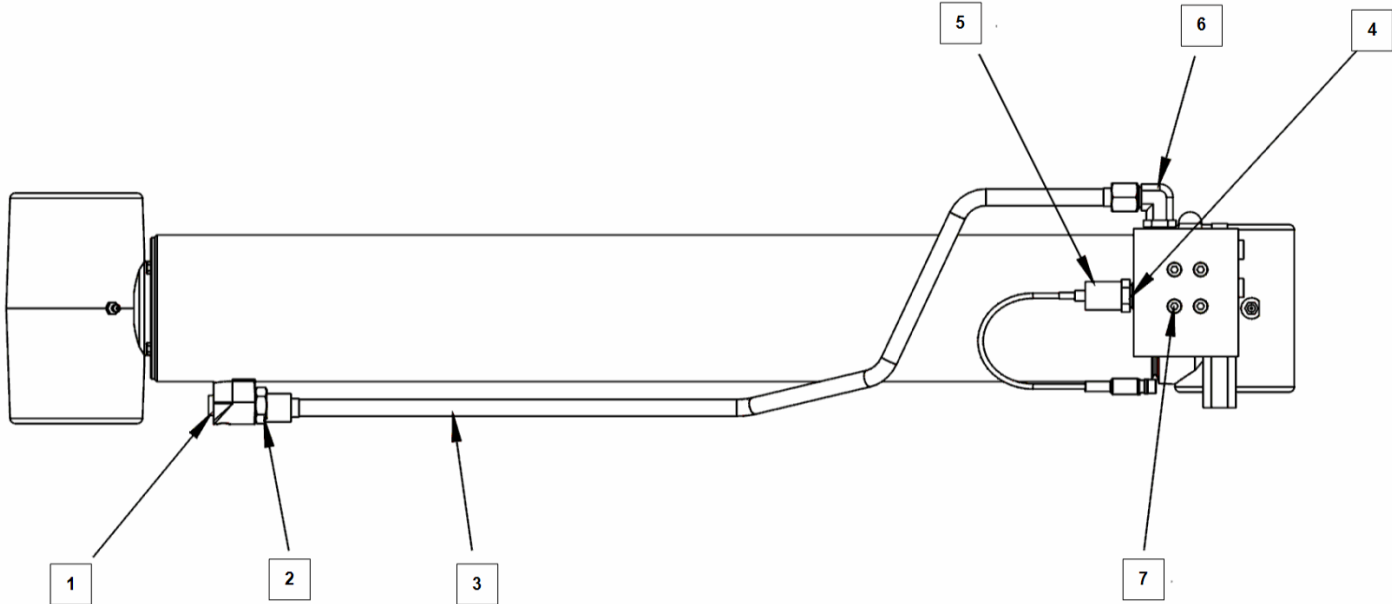

For LHV see hydraulic diagrams
Under service manuals

Link to load holding valves


371-7836

Pos	Part No	Description	Quantity
1	9819622	PLUG	1
2	9991662	COUPLING	1
3	3710815	HYDRAULIC PIPE	1
4	9939342	SEAL WASHER	1
5	3602800	PRESSURE SENSOR	1
6	9985379	ANGLE COUPLING	1
7	9996893	SCREW	4

Model:166 K Chapter 2 Connection LHV 1st boom cylinder

3708748 1st boom cylinder

3708748 - 1st boom cylinder

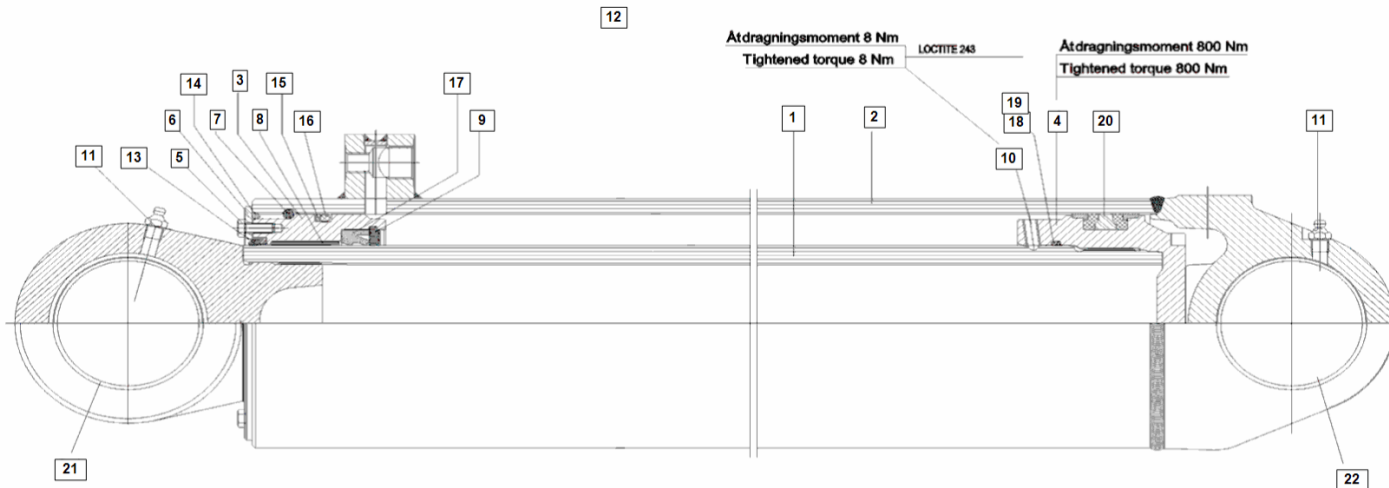

370-8748

Pos	Part No	Description	Quantity
1	6437133	PISTON ROD	1
2	6437567	CYLINDER TUBE	1
3	3558363	CYLINDER HEAD	1
4	4482778	PISTON	1
5	9923918	SCREW	1
6	3558487	COVER	1
7	6205151	LOCKING WIRE	1
8	9951288	BUSHING	1
9	3561313	RETAINING RING	1
10	9901761	SCREW	1
11	9906185	GREASE NIPPLE	1
12	3301800	PACKING SET	1
20	9501088	SEAL	1
21	9814311	BUSHING	2
22	9814311	BUSHING	2
Kit 3301800 PACKING SET:			
13	9807772	SCRAPER	1
14	9971645	O-RING	1
15	9936939	SUPPORT RING	1
16	9933654	O-RING	1
17	9814299	SEAL RING	1
18	9933492	O-RING	1
19	9938851	SUPPORT RING	1