

		TYPE						
		F = FILTER COMPLETE	F	F	F	F		
		B = FILTER HOUSING	B	B	B	B	ELEMENT	E
R	F	FAMILY, NOMINAL SIZE & LENGTH					FAMILY SIZE & LENGTH	R F
			11	12	13	14		
		PORT TYPE						
		B = BSP thread	B	B	B	B		
		A = BSP thread, double port (only A08/AD1)	A	A	A	A		
		N = NPT thread	N	N	N	N		
		S = SAE thread	S	S	S	S		
		PORT SIZE						
		06 = 3/4"	06	06	06	06		
		08 = 1"	08	08	08	08		
		10 = 1 1/4"	10	10	10	10		
		F BYPASS						
		F = 150 kPa (1,5 bar)	F	F	F	F		
		SEALS					SEALS	
		N = NBR Nitrile	N	N	N	N	N = NBR	
		F = FKM Fluoroelastomer	F	F	F	F	F = FKM	
		FILTER MEDIA					FILTER MEDIA	
		FA = fiber 5 $\mu\text{m}_{(e)}$ $\beta > 1.000$	FA	FA	FA	FA	FA = fiber 5 $\mu\text{m}_{(e)}$	
		FB = fiber 7 $\mu\text{m}_{(e)}$ $\beta > 1.000$	FB	FB	FB	FB	FB = fiber 7 $\mu\text{m}_{(e)}$	
		FC = fiber 12 $\mu\text{m}_{(e)}$ $\beta > 1.000$	FC	FC	FC	FC	FC = fiber 12 $\mu\text{m}_{(e)}$	
		FD = fiber 21 $\mu\text{m}_{(e)}$ $\beta > 1.000$	FD	FD	FD	FD	FD = fiber 21 $\mu\text{m}_{(e)}$	
		CC = cellulose 10 μm $\beta > 2$	CC	CC	CC	CC	CC = cellulose 10 μm	
		ME = wire mesh 60 μm	ME	ME	ME	ME	ME = wire mesh 60 μm	
		CLOGGING INDICATOR						
		05 = nr. 2 x 1/8" ports, plugged	05	05	05	05		
		30 = manometer, scale 0 - 600 kPa (0 - 6 bar)	30	30	30	30		
		P4 = SPDT, pressure switch	P4	P4	P4	P4		
		ACCESSORIES						
		W = no accessory available	W	W	W	W		
		F = with diffusor	F	F	F	F		
		ACCESSORIES						
		W = no accessory available	W	W	W	W		
		M = magnetic core	M	M	M	M		

When the filter is ordered with FKM seals, the first digit of the indicator code is a letter (please see page 184 - 185).

FILTER ELEMENT

	A	B	C	kg	Area (cm ²)		
					Media F+	Media C+	Media M+
ERF11	45	72	106	0,25	770	1.250	460
ERF12	45	72	150	0,35	1.170	1.800	650
ERF13	45	72	200	0,45	1.570	2.450	880
ERF14	45	72	300	0,60	2.370	3.600	1.320

