


**Lastarmmontage / Load booms**  
10.79/10.81SH Schlauch oben / hoses at the top

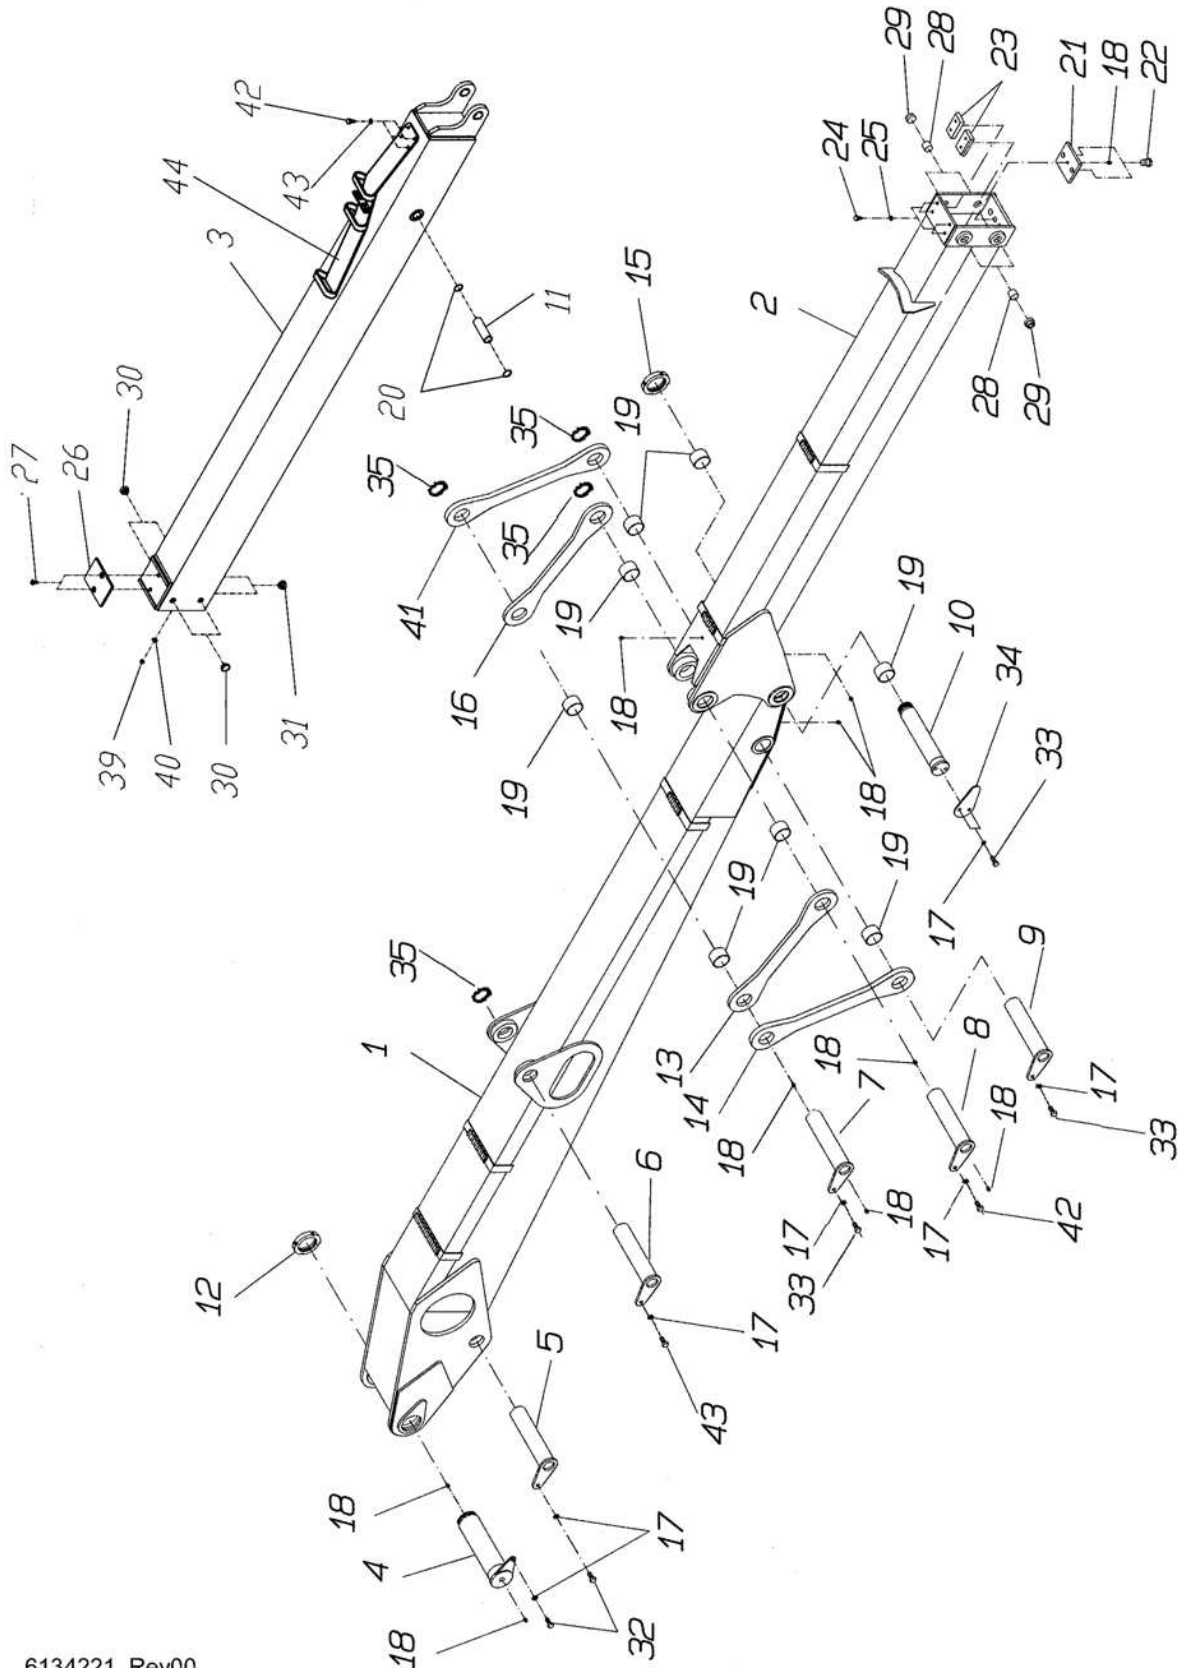

6134221\_Rev00



Stahlbau  
Steelwork

SP\_60560-0601-01\_60560-0601-02\_Rev01.docx

**Lastarmmontage / Load booms**  
10.79/10.81SH Schlauch oben / hoses at the top

Pos.	Bezeichnung	Description	Ersatzf.Nr. spare-part no.	Stück Quantity
1	Hubarm 10.79SH	Lifting boom 10.79SH	60527-0000-00	1
	Hubarm 10.81SH	lifting boom 10.81SH	60520-0000-00	
2	Knickarm	bending boom	0SK9.81-081-00	1
3	Ausschub	extension	0SK9.81-080-00	1
4	Bundbolzen kpl.	pin cpl.	41225-0000-00	1
5	Bolzen kpl.	pin cpl.	40127-0000-00	1
6	Bolzen	pin	40560-0000-00	1
7	Bolzen	pin	40559-0000-00	1
8	Bolzen	pin	40557-0000-00	1
9	Bolzen	pin	40558-0000-00	1
10	Bundbolzen	pin	41067-0000-00	1
11	Bolzen	pin	40144-0000-00	1
12	Nutmutter	slotted round nut	1211	1
13	Gelenkstange kurz kpl.	toggle link short cpl.	60553-0000-00	1
14	Gelenkstange lang	toggle link long	60552-0000-05	1
15	Nutmutter	slotted round nut	1208	1
16	Gelenkstange kurz kpl.	toggle link short cpl.	60554-0000-00	1
17	Federring	spring washer	2055	8
18	Schmiernippel	grease nipple	990	10
19	Motomatbüchse	bearing	15005	8
20	Seegerring	circlip	6102	2
21	Lagerplatte vorne	bearing plate ahead	60562-0000-00	1
22	Zapfenschraube	plug screw	48012-0000-00	2
23	Führung	guide plate	60563-0000-00	2
24	Sechskantschraube	hex. screw	018	4
25	Federring	spring washer	2054	4
26	Lagerplatte hinten	bearing plate back	60561-0000-00	1
27	Senkkopfschraube	countersunk screw	302	2
28	Führungsstopfen	guide stopper	51293-0000-00	4
29	Einstellschraube	adjusting screw	48014-0000-00	4
30	Stopfen	stopper	51313-0000-00	4
31	Stopfen	stopper	51277-0000-00	2
32	Sechskantschraube	hex. screw	078	2
33	Sechskantschraube	hex. screw	024	2
34	Sicherungsglasche	pin lock	52090-0000-00	1
35	Seegerring	circlip	6003	4
39	Stopfmutter	nut	1202	2
40	Scheibe	washer	2003	2
41	Gelenkstange	toggle link	60552-0000-06	1
42	SK- Schraube	hex. screw	024	4
43	Federring	hex. screw	2055	4
44	Schlauchführung	hose routing	0SK9.81-090-00	1