

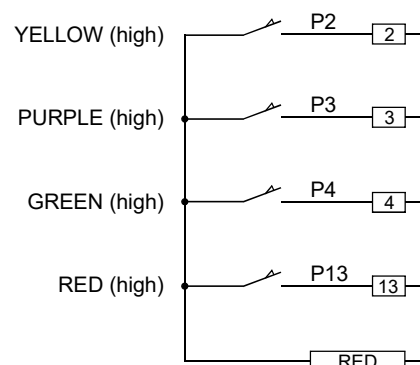
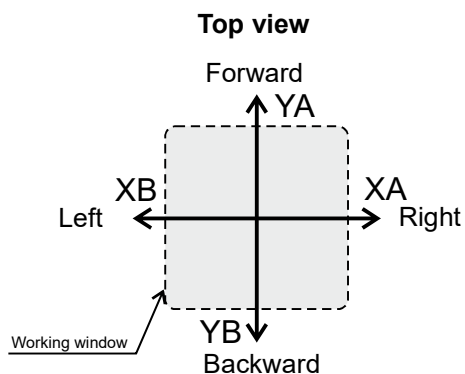
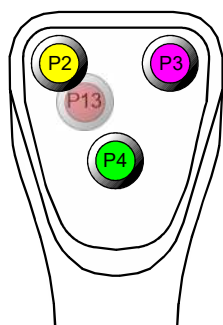


HANDLE (type 441)

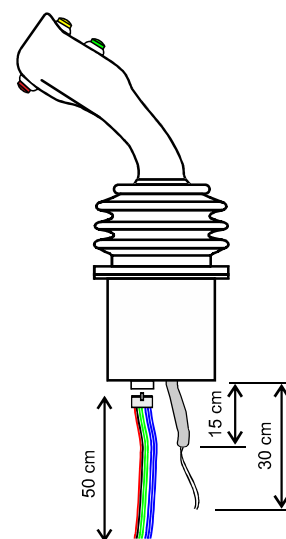


CABLE (type 002)

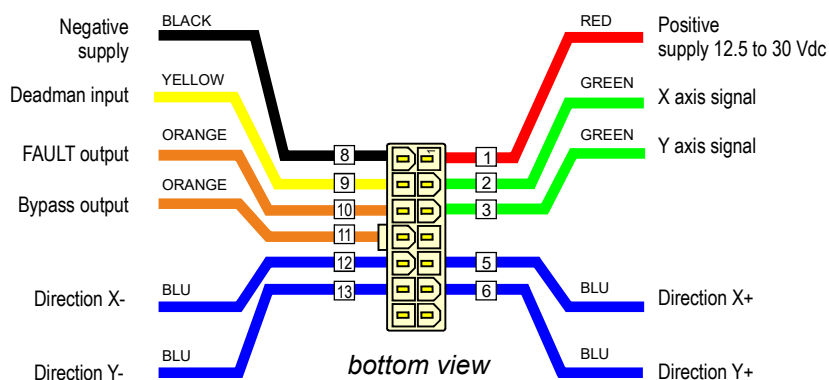


NOTE: to enable joystick, connect FAULT output (orange wire - pin 10) with Deadman Input (yellow wire - pin 9) - or use an external enable push button / emergency stop

3-axis joystick (type 059)

bottom view

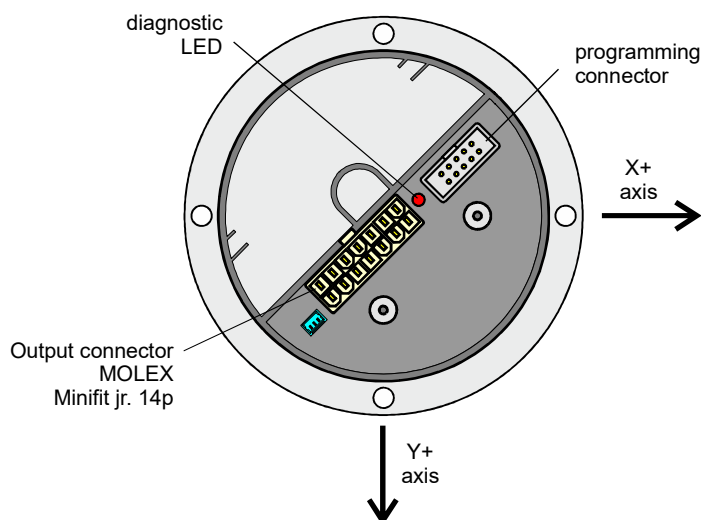

output signal (V) for each axis

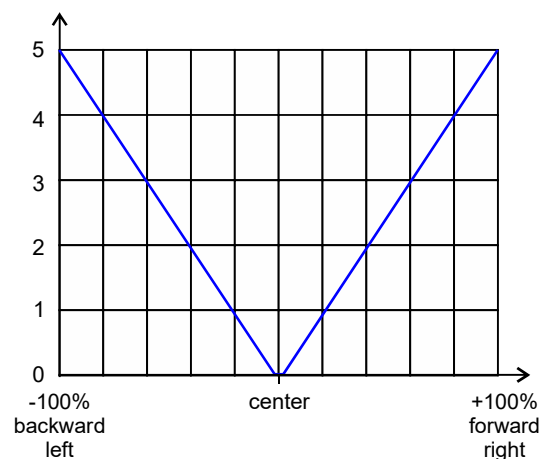

Description (type 059):

Output signal range: 5V ÷ 0V ÷ 5V (for each axis)

Curve shape: linear

SET2 used for safety trigger

scanrefcofaber	CODICE: PJS-059-441-002
DESC:	Manipolatore proporzionale a 3 assi con uscite 5-0-5V
FILE:	...\Prodotti\Manipolatori\JS-JP-JC\Mda-JS\Versioni\PJS-059-441-002.cdr
DATA: 29.04.2024	FOGLIO 1 DI 1