


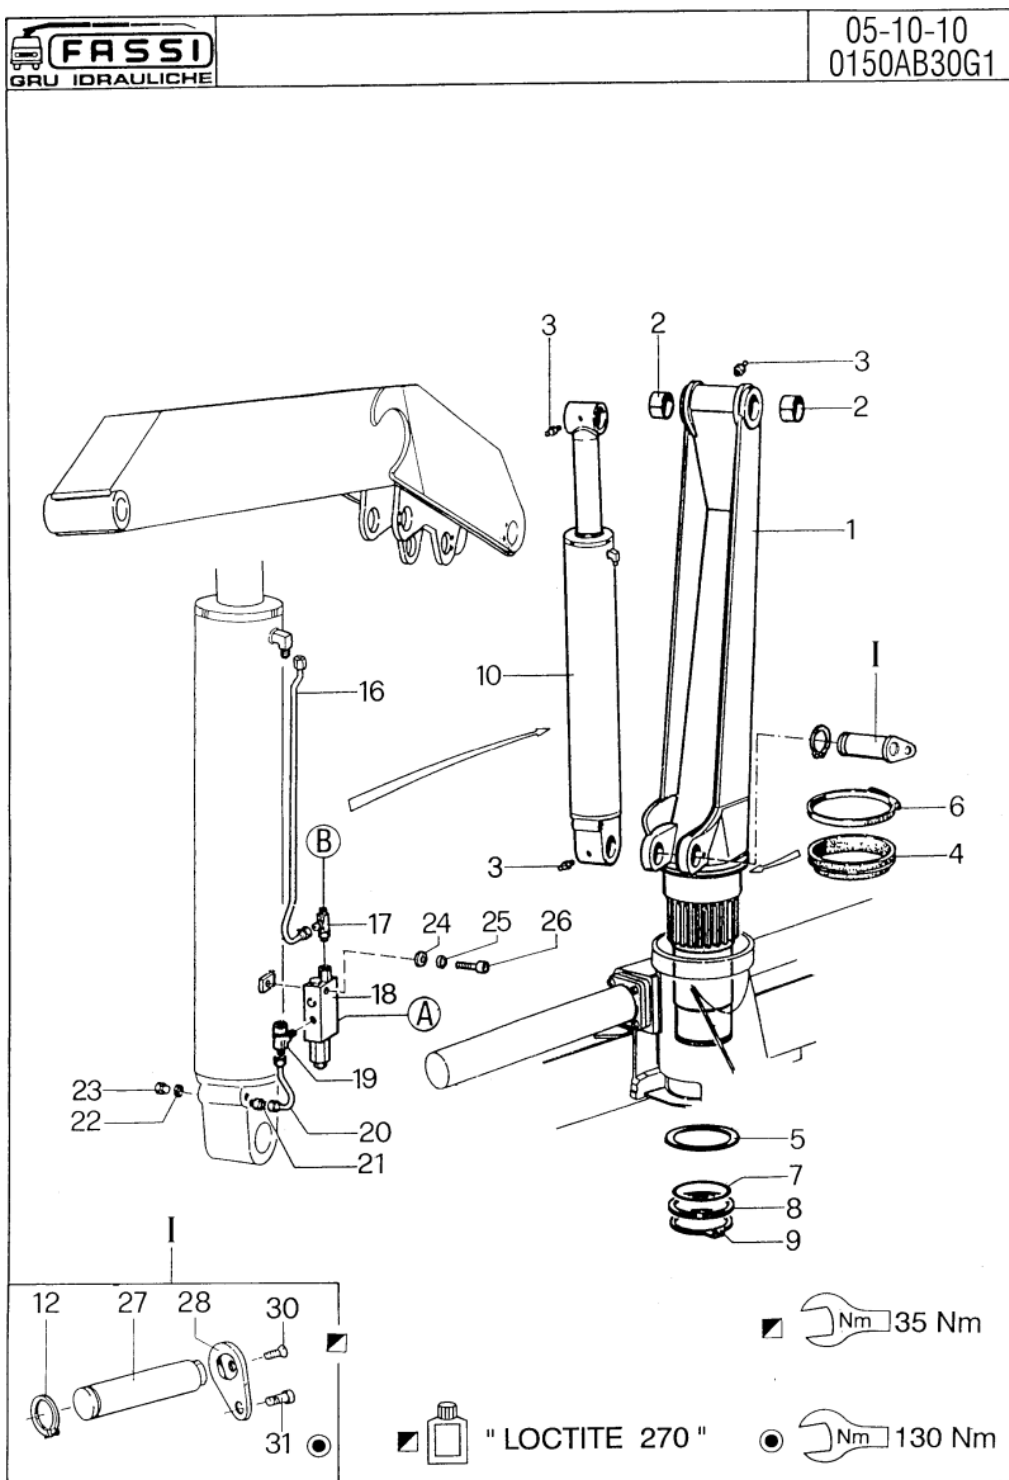

F150A Standard 150AB014 COLUMN ASSEMBLY

Pos	Code	Description	Um	Qty	From	To	W1	W2
1	116167	COLUMN	NR	1.0				
2	BZ084	BUSH	NR	*2.0				
3	IN845	GREASE NIPPLE	NR	3.0				
4	51887	DUST COVER RING	NR	1.0				
5	58026	THRUST BEARING	NR	1.0				
6	FS927	CLAMP	NR	1.0				
7	GO240	O-RING	NR	1.0				
8	58185	WASHER	NR	1.0				
9	AS971	CIRCLIP	NR	1.0				
10	116155	RAM	NR	1.0				
12	AS717	CIRCLIP	NR	1.0				
16	116088	PIPE	NR	1.0				
17	RV945	UNION	NR	1.0				
18	VA269	VALVE	NR	1.0				
19	RV1013	UNION	NR	1.0	3366			
20	116216	PIPE	NR	1.0	3366			
21	NI920	NIPPLE	NR	1.0				
22	RR808	WASHER	NR	1.0				
23	TA737	PLUG	NR	1.0				
24	RP201	WASHER	NR	1.0				
25	RE278	WASHER	NR	1.0				
26	VI756	SCREW	NR	1.0				
27	105770	PIN	NR	1.0				
28	FP010	PIN STOP	NR	1.0				
30	VI721	SCREW	NR	1.0				
31	FP150	SCREW	NR	1.0				