


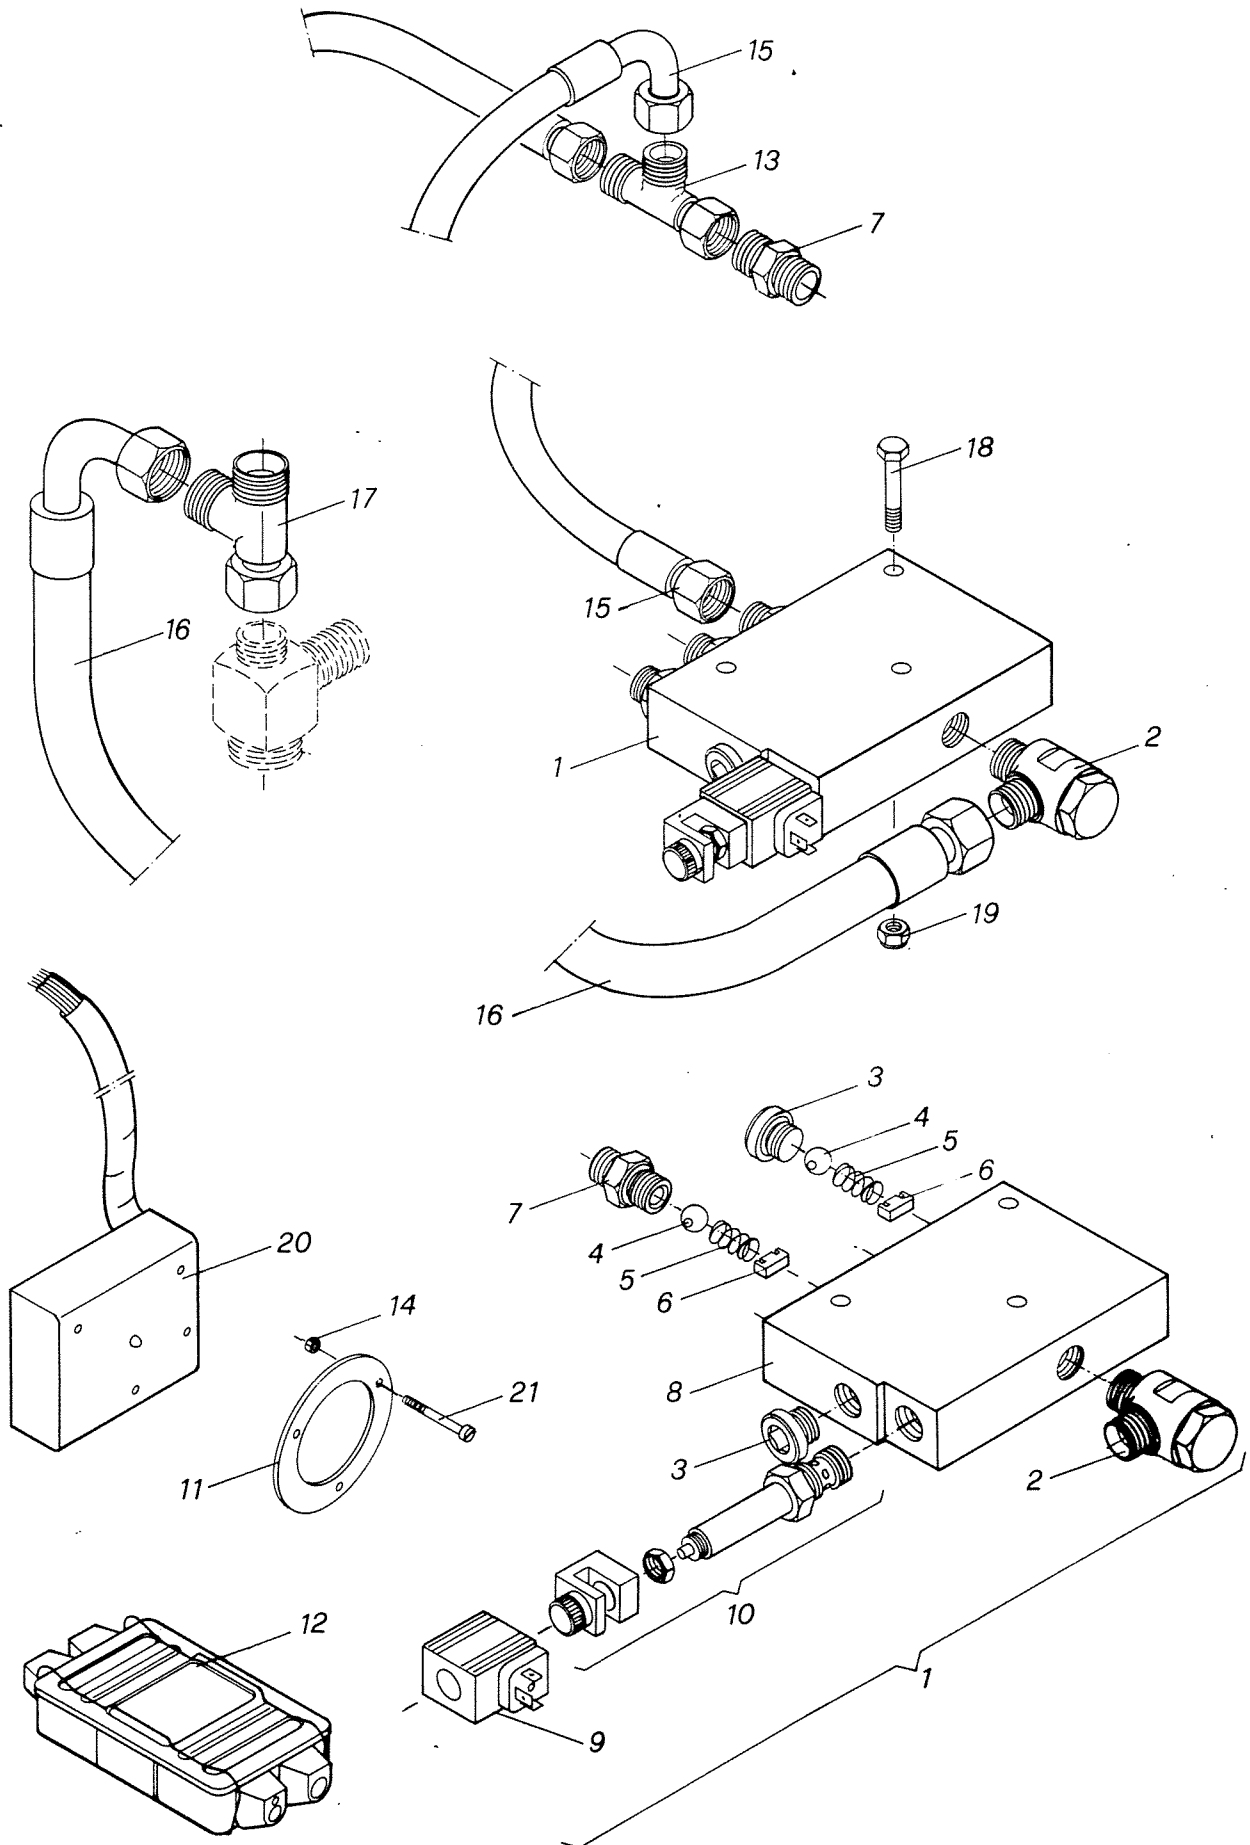

Nr. No. No.	Ersatzteil Nr. Sparepart no. No Piece de rechange	Stk. Qty. Nbre.	Teilebezeichnung	Description	Nomenclature	Abmessung Dimension Dimension
1	UV143	1	Überlastblock kpl.(2-10)	Overload block cpl.(2-10)	Bloc de surcharge cpl.(2-10)	WHO 18 LR vsti R1/2"-ed D 14 DIN 5401
2	EA 242		Schwenkverschraubung	Banjo	Raccord tournant	
3	EA 261		Verschlußschraube	Plug	Bouchon	
4	EK 004		Kugel	Ball	Bille	
5	EF 008		Druckfeder	Pression spring	Ressort a pression	
6	HX 419	2	Steg	Catwalk	Ame	GE 14 SRed
7	EA 020		Verschraubung	Adaptor	Raccord	
8	HLA 381	1	Gehäuse	Housing	Carter	24 V
9	EV 575	1	Magnetspule	Magnet coil	Bobine magnetique	
10	EV1006	1	Magnetventil, kpl.	Magnet valve, cpl.	Soupape magnetique, cpl.	
11	HT1252	1	Abdeckring	Cover ring	Anneau couverture	evL 14 S M 4 DIN 934 NW 10x560
12	EEA 126	1	Klemmdose	Clamp housing	Boite d'agraves	
13	EA 014		L-Verschraubung	L-coupling	Raccord-L	
14	EM 065		Mutter	Nut	Ecrou	
15	EH 856	1	Druckschlauch (FL)	Hose (FL)	Flexible (FL)	
16	EH 855	1	Druckschlauch (FL)	Hose (FL)	Flexible (FL)	NW 16x570
17	EA 511		L-Verschraubung	L-coupling	Raccord-L	evL 18 L M 8x50 DIN 933 M 8 DIN 985
18	ES 008		Schraube	Screw	Vis	
19	EM 026		Mutter	Nut	Ecrou	
20	EEA 258	1	Überlastrelais	Overload relay	Relais de surcharge	
21	ES 450		Schraube	Screw	Vis	M 4x50 DIN 84 NW 10x790
22	EH 898	1	Druckschlauch (HS)	Hose (HS)	Flexible (HS)	
23	EH 900	1	Druckschlauch (HS)	Hose (HS)	Flexible (HS)	NW 16x1000